



**Critical**  
manufacturing  
an ASM PT company

# How to: Create an Automation Protocol

10.2

April 2026

## DOCUMENT ACCESS


Public

## DISCLAIMER


The contents of this document are under copyright of Critical Manufacturing S.A. it is released on condition that it shall not be copied in whole, in part or otherwise reproduced (whether by photographic, or any other method) and the contents therefore shall not be divulged to any person other than that of the addressee (save to other authorized offices of his organization having need to know such contents, for the purpose for which disclosure is made) without prior written consent of submitting company.

# How to: Create an Automation Protocol


1. Go to the Business Data menu.

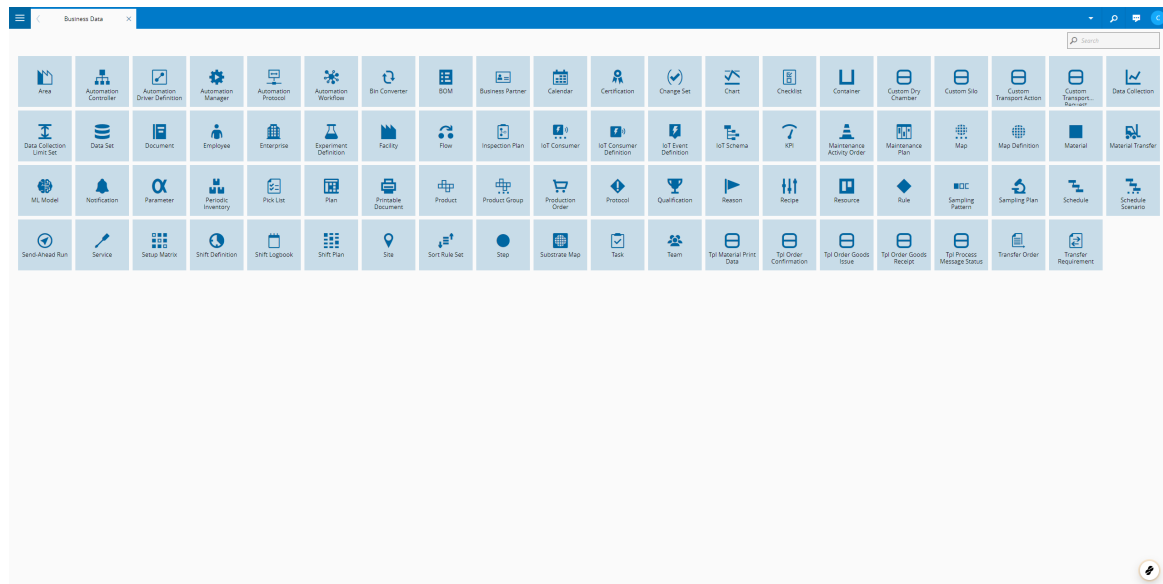


2. Select The Automation Protocol tile

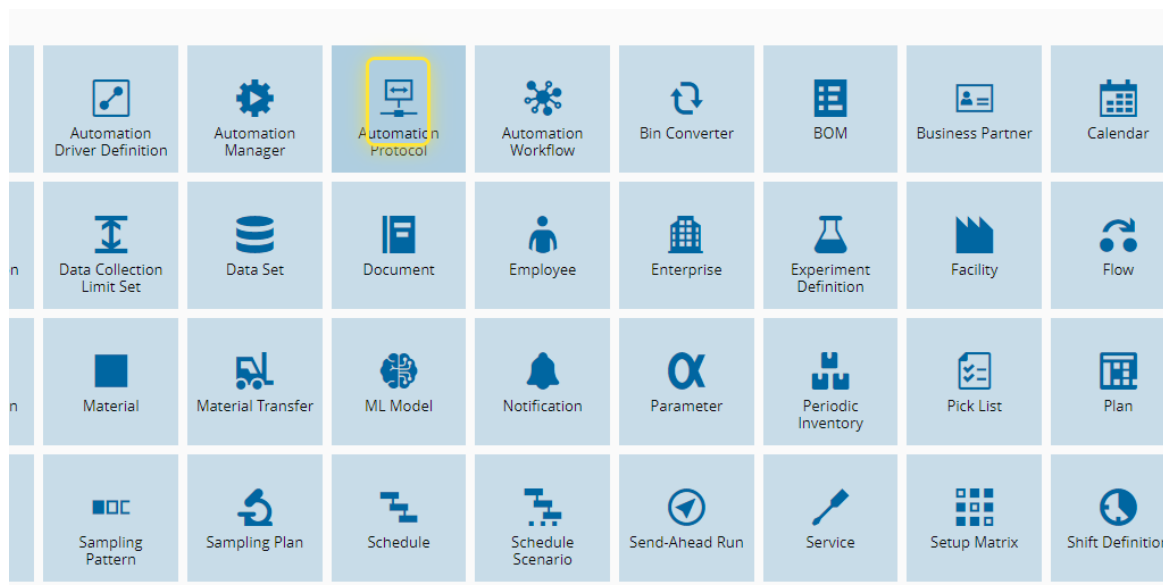

3. Select New

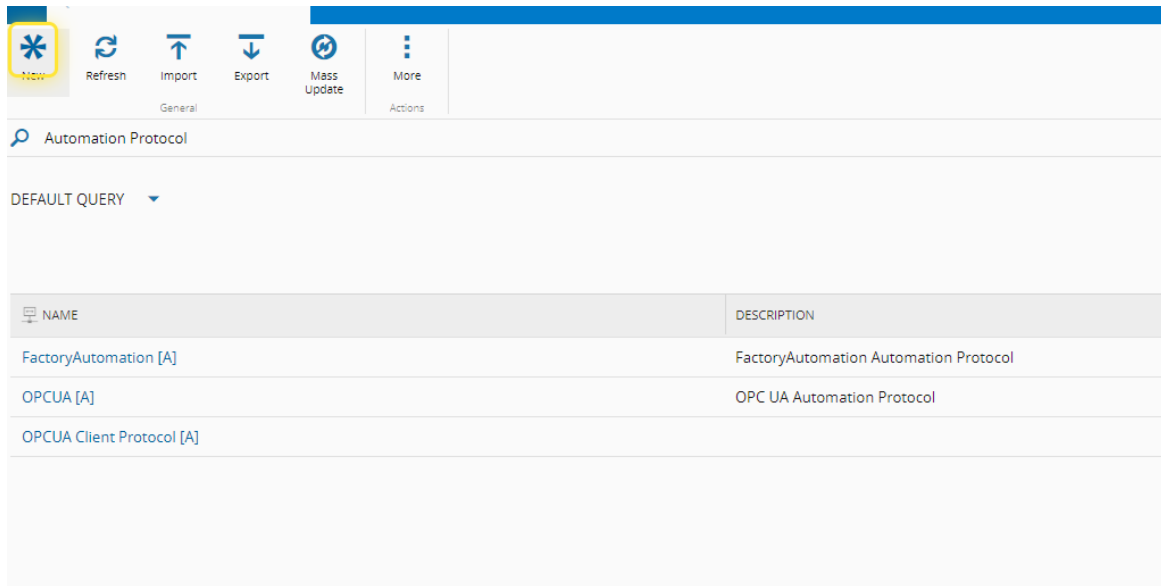


#### 4. Add a ChangeSet

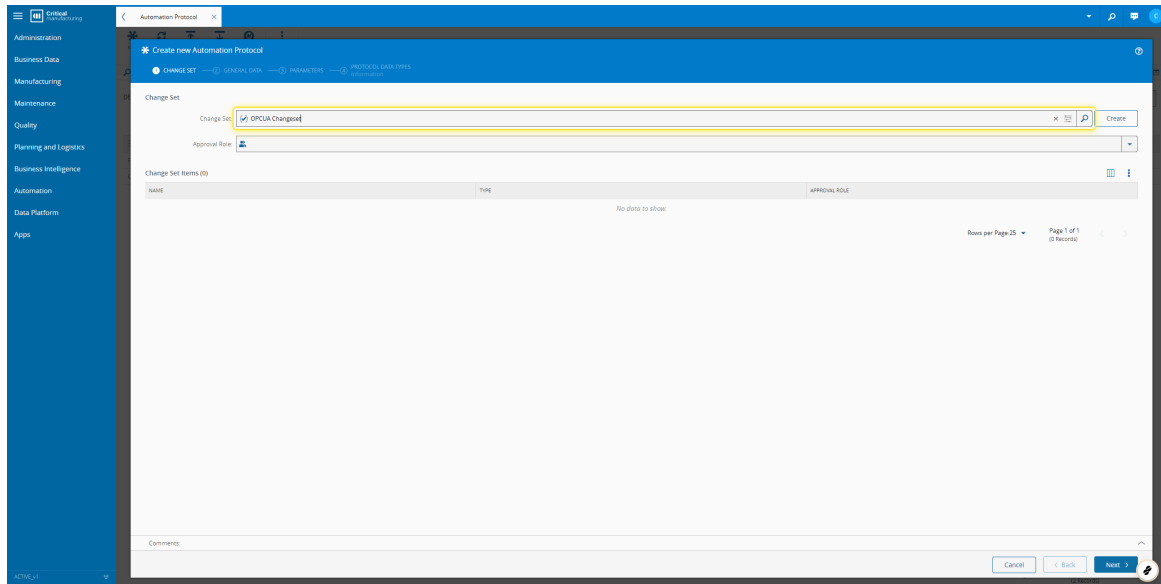


#### 5. Select Next



## 6. Provide a Name for your Automation Protocol

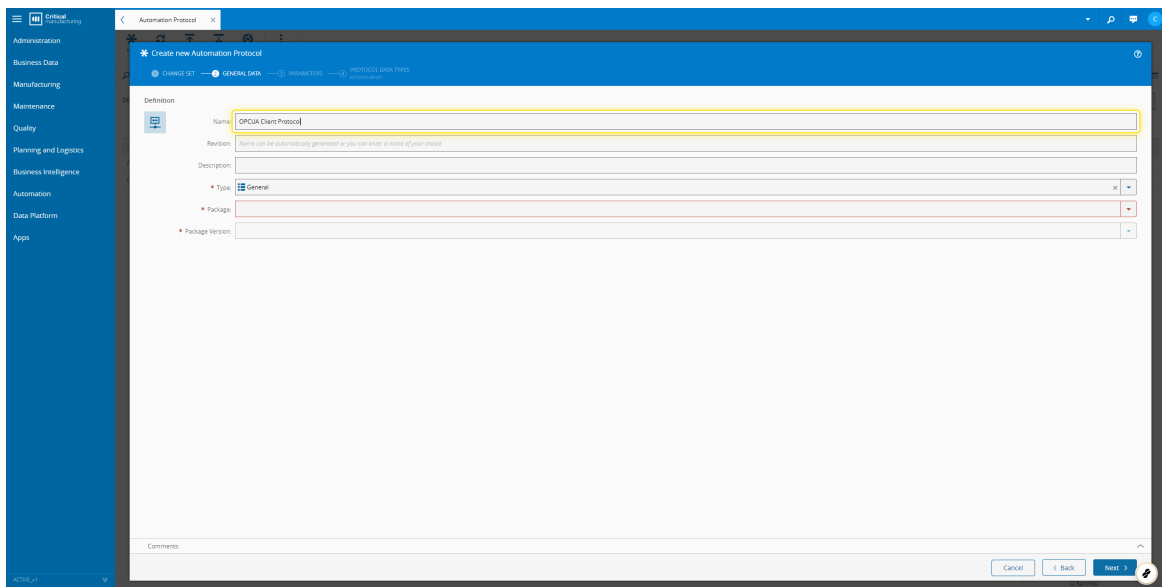


## 7. Select the Driver package that you depend on

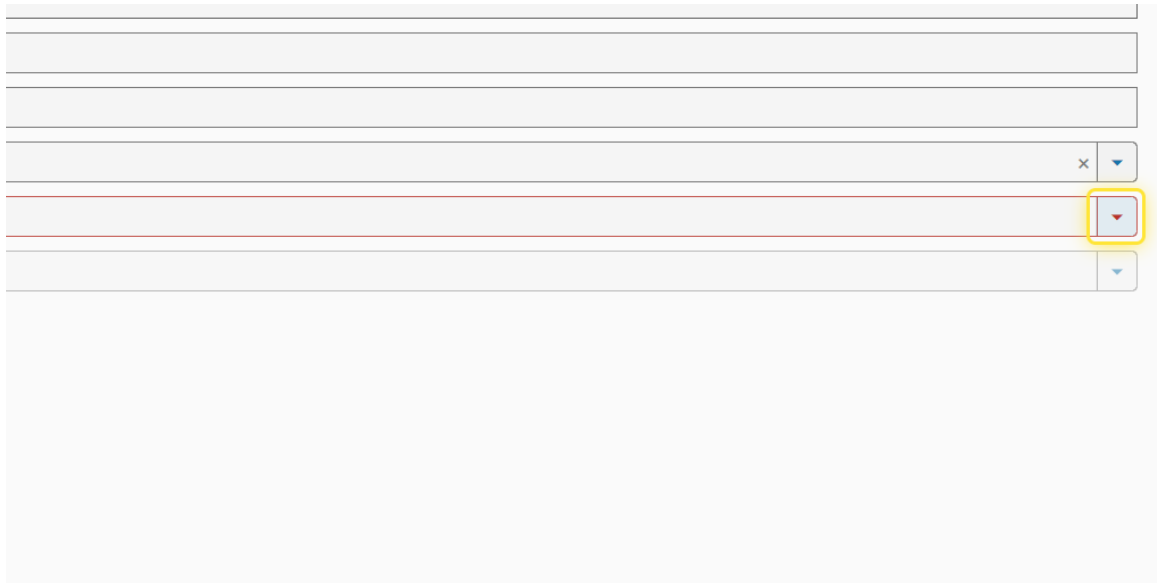

A screenshot of a software interface showing a list of items. The list consists of several rows, each with a small dropdown arrow on the right side. The second row from the bottom has its dropdown arrow highlighted with a yellow box.

8. Select @criticalmanufacturing/connect-iot-driver-opcua

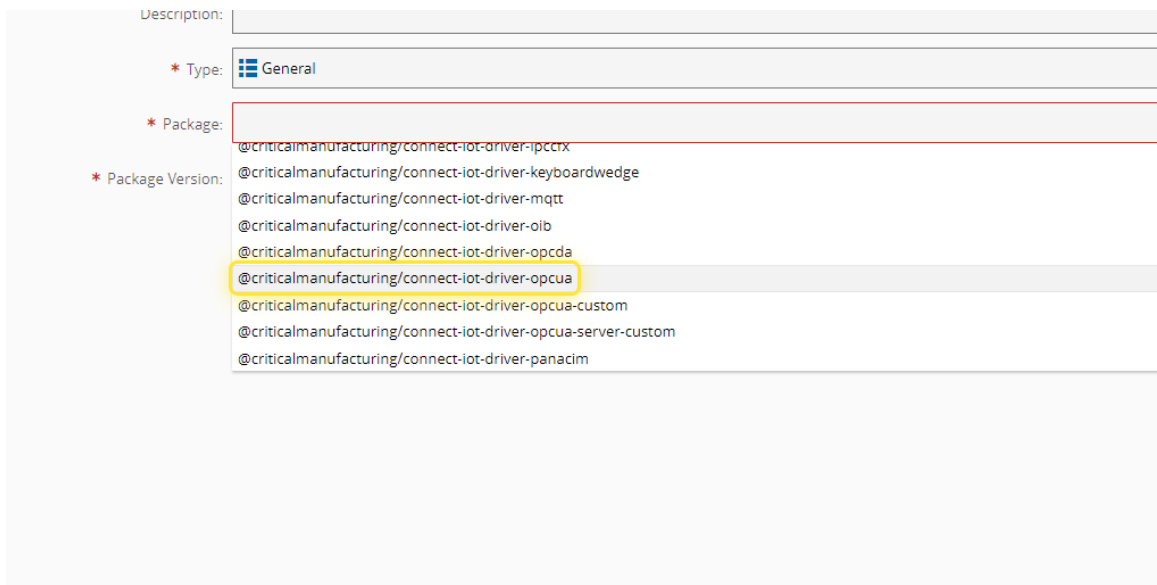

A screenshot of a software interface showing a dropdown menu. The menu is open, displaying a list of package versions. The option @criticalmanufacturing/connect-iot-driver-opcua is highlighted with a yellow box.

Description:

\* Type:

\* Package:

\* Package Version:

- @criticalmanufacturing/connect-iot-driver-ipcctx
- @criticalmanufacturing/connect-iot-driver-keyboardwedge
- @criticalmanufacturing/connect-iot-driver-mqtt
- @criticalmanufacturing/connect-iot-driver-oib
- @criticalmanufacturing/connect-iot-driver-opcda
- @criticalmanufacturing/connect-iot-driver-opcua
- @criticalmanufacturing/connect-iot-driver-opcua-custom
- @criticalmanufacturing/connect-iot-driver-opcua-server-custom
- @criticalmanufacturing/connect-iot-driver-panacim

9. Select the desired package version

**Create new Automation Protocol**

1 CHANGE SET — 2 GENERAL DATA — 3 PARAMETERS — 4 PROTOCOL DATA TYPES information

Definition

Name: OPCUA Client Protocol

Revision: *Name can be automatically generated or you can enter a name of your choice*

Description:

\* Type: General

\* Package: @criticalmanufacturing/connect-iot-driver-opcua

\* Package Version:

### 10. Select the version you wish to use

Description:


\* Type: General

\* Package: @criticalmanufacturing/connect-iot-driver-opcua


\* Package Version:

- 10.1.2-202309224
- 10.1.0-202307272
- 10.0.3-202306236
- 8.3.7-202205275
- 8.3.3-202201212
- 8.3.2-2021112215
- 8.3.0-202110283

### 11. Select Next

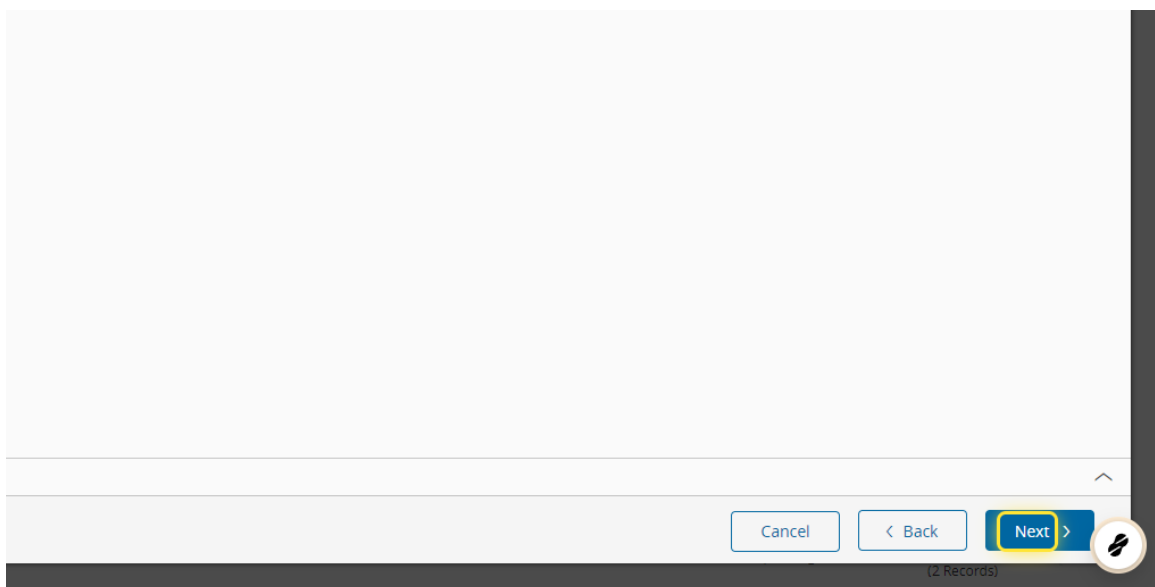

12. You can Edit the default Parameters or just press Next

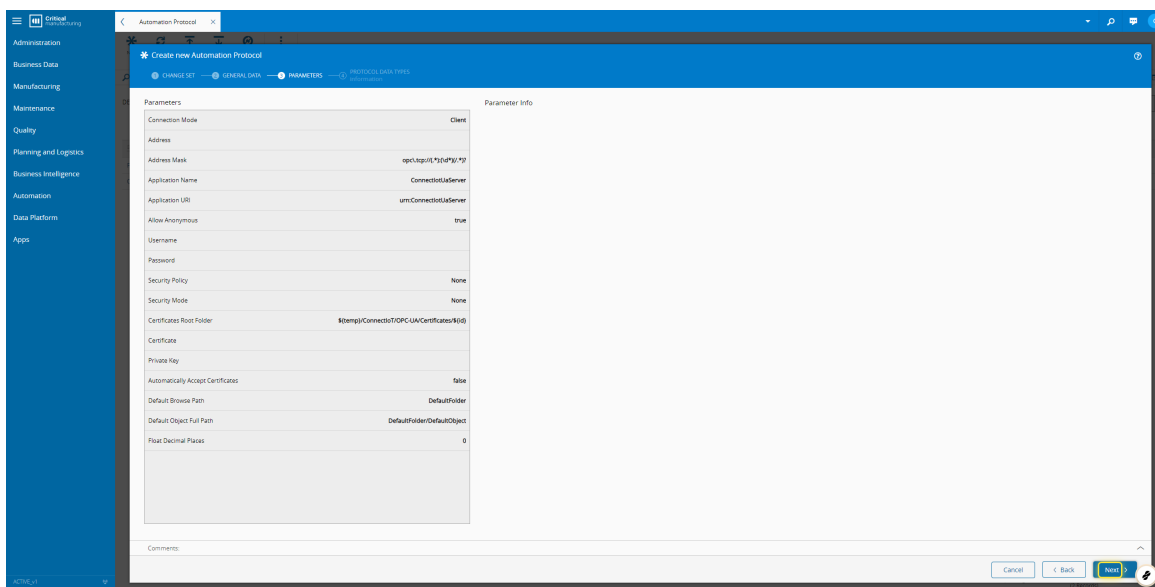

13. Select Create

rpe

	DATA TYPE	DEFAULT VALUE
	String	
	String	
	Integer	100
	String	
	String	
	String	Input
	String	Subscription
	Integer	1000

Cancel < Back Create



# Legal Information

## **Disclaimer**

The information contained in this document represents the current view of Critical Manufacturing on the issues discussed as of the date of publication. Because Critical Manufacturing must respond to changing market conditions, it should not be interpreted to be a commitment on the part of Critical Manufacturing, and Critical Manufacturing cannot guarantee the accuracy of any information presented after the date of publication. This document is for informational purposes only.

Critical Manufacturing makes no warranties, express, implied or statutory, as to the information herein contained.

## **Confidentiality Notice**

All materials and information included herein are being provided by Critical Manufacturing to its Customer solely for Customer internal use for its business purposes. Critical Manufacturing retains all rights, titles, interests in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Critical Manufacturing and the Customer must not disclose or transfer by any means any of these materials or information, whether total or partial, to any third party without the prior explicit consent by Critical Manufacturing.

## **Copyright Information**

All title and copyrights in and to the Software (including but not limited to any source code, binaries, designs, specifications, models, documents, layouts, images, photographs, animations, video, audio, music, text incorporated into the Software), the accompanying printed materials, and any copies of the Software, and any trademarks or service marks of Critical Manufacturing are owned by Critical Manufacturing unless explicitly stated otherwise. All title and intellectual property rights in and to the content that may be accessed through use of the Software is the property of the respective content owner and is protected by applicable copyright or other intellectual property laws and treaties.

## **Trademark Information**

Critical Manufacturing is a registered trademark of Critical Manufacturing.

All other trademarks are property of their respective owners.