



Critical
manufacturing
an ASM PT company

How to: Perform Assemble

10.2

April 2026

DOCUMENT ACCESS


Public

DISCLAIMER

The contents of this document are under copyright of Critical Manufacturing S.A. it is released on condition that it shall not be copied in whole, in part or otherwise reproduced (whether by photographic, or any other method) and the contents therefore shall not be divulged to any person other than that of the addressee (save to other authorized offices of his organization having need to know such contents, for the purpose for which disclosure is made) without prior written consent of submitting company.


How to: Perform Assemble

1. Go to the Business Data menu.

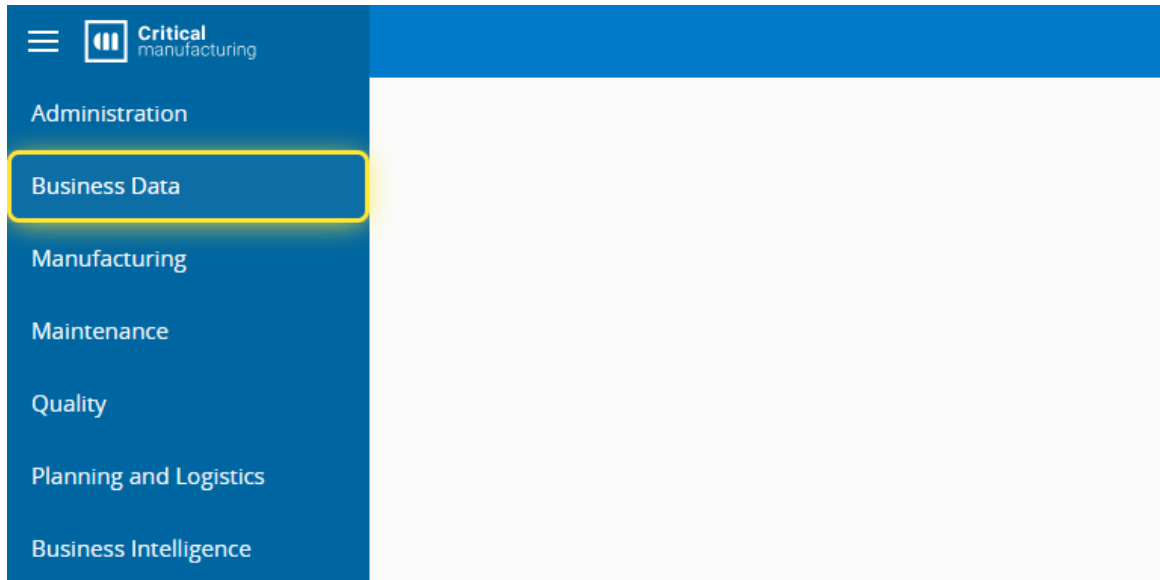

2. Select the Step entity.


This How To will show you how to perform assemble through the Step View. However, this operation can also be performed through the Material Details View.

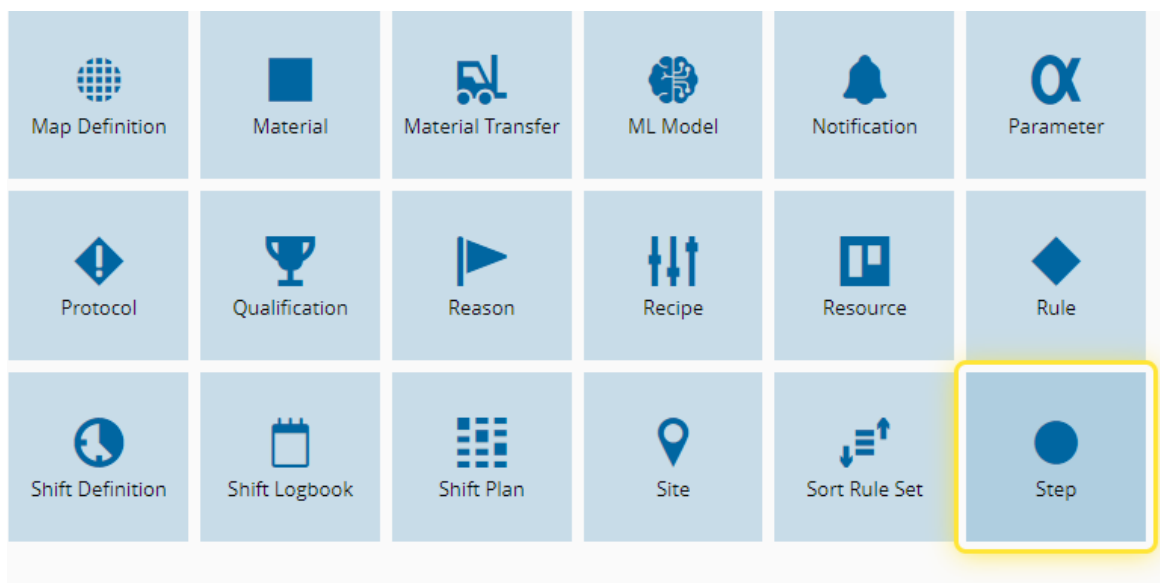

3. Select the Step you want.

Etching	Etching
Exposure	Exposure
High Current Implantation	High Current Implantation
High Temperature Anneal	High Temperature Anneal
i-Line Exposure	i-Line Exposure
Inline Parametric Test	Inline Parametric Test
Low Temperature Anneal	Low Temperature Anneal
Medium Current Implantation	Medium Current Implantation
Metal Etching	Metal Etching
Mixing	Mixing Step

4. In the Details page, select Views.

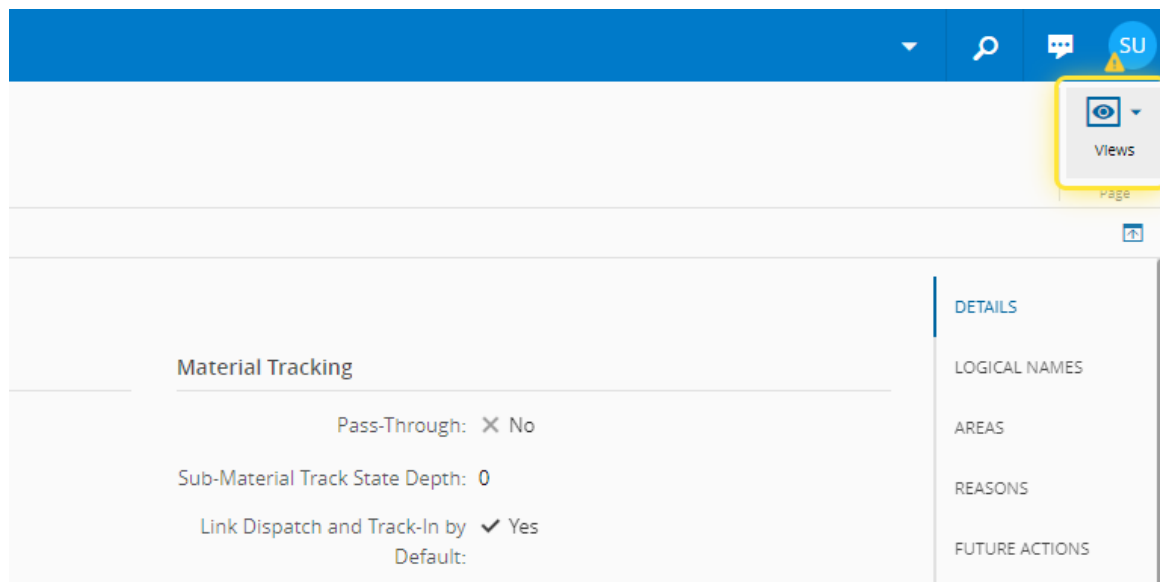


The screenshot shows a software interface with a blue header bar containing navigation icons and a user profile 'SU'. A 'Views' dropdown menu is open in the top right corner, showing an eye icon and the text 'Views'. Below the header, the main content area is titled 'Material Tracking' and contains the following settings:

- Pass-Through: No
- Sub-Material Track State Depth: 0
- Link Dispatch and Track-In by Yes
- Default:


On the right side of the interface, there is a vertical sidebar with the following menu items: DETAILS, LOGICAL NAMES, AREAS, REASONS, and FUTURE ACTIONS.

5. Select the Step View option.

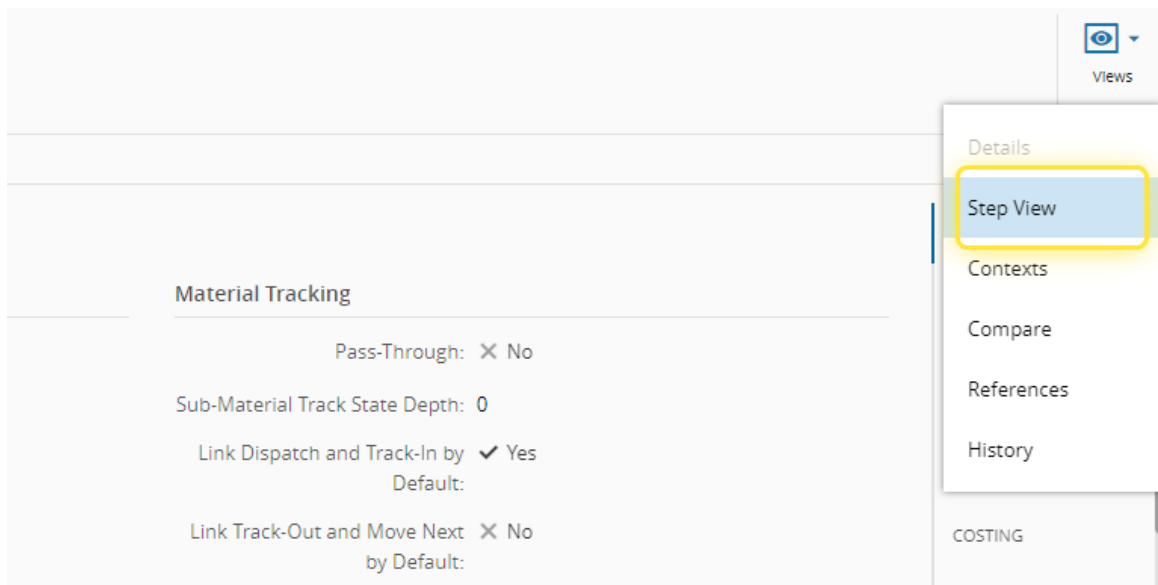


6. Select the Material you want.

The Material must be In Process.

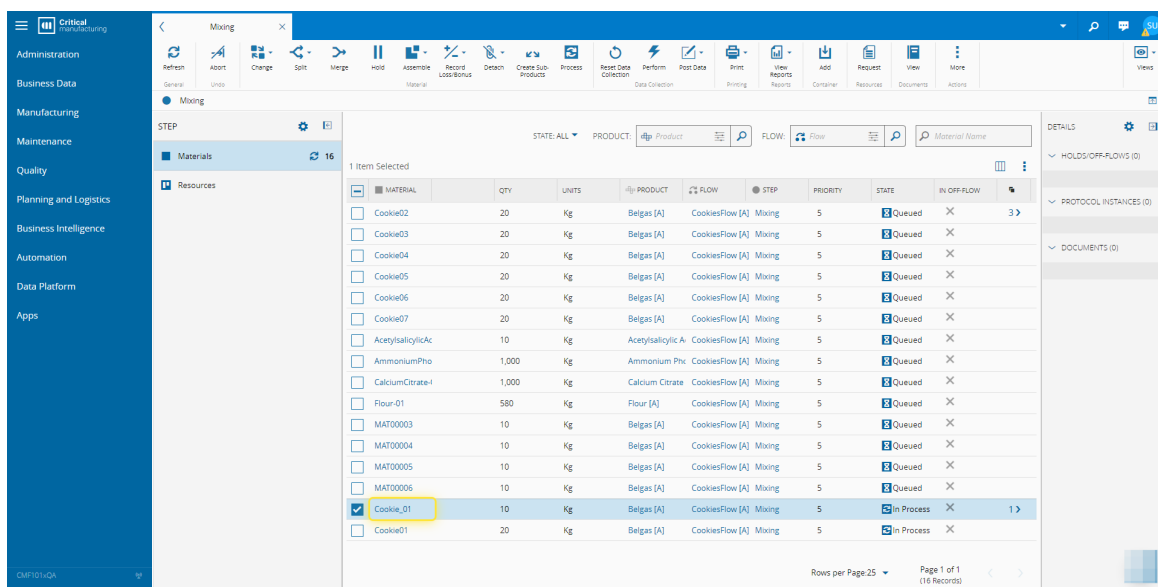


7. Select the Assemble button.

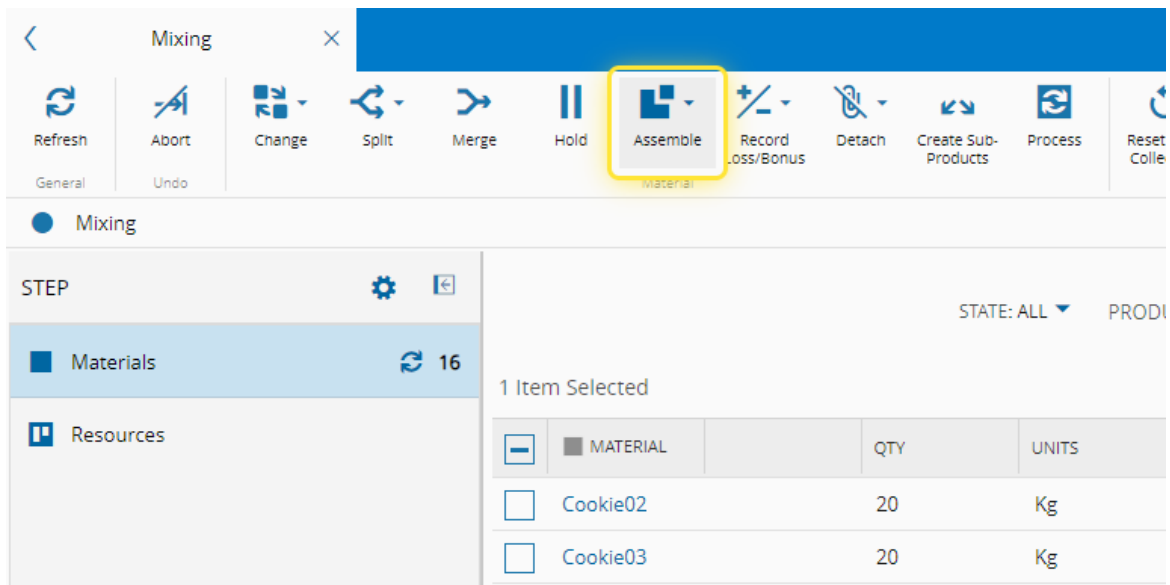


8. Select the Assemble option.

For more information, see [Assemble Material - Critical Manufacturing Documentation Portal](#) and [Material Assembly - Critical Manufacturing Documentation Portal](#)

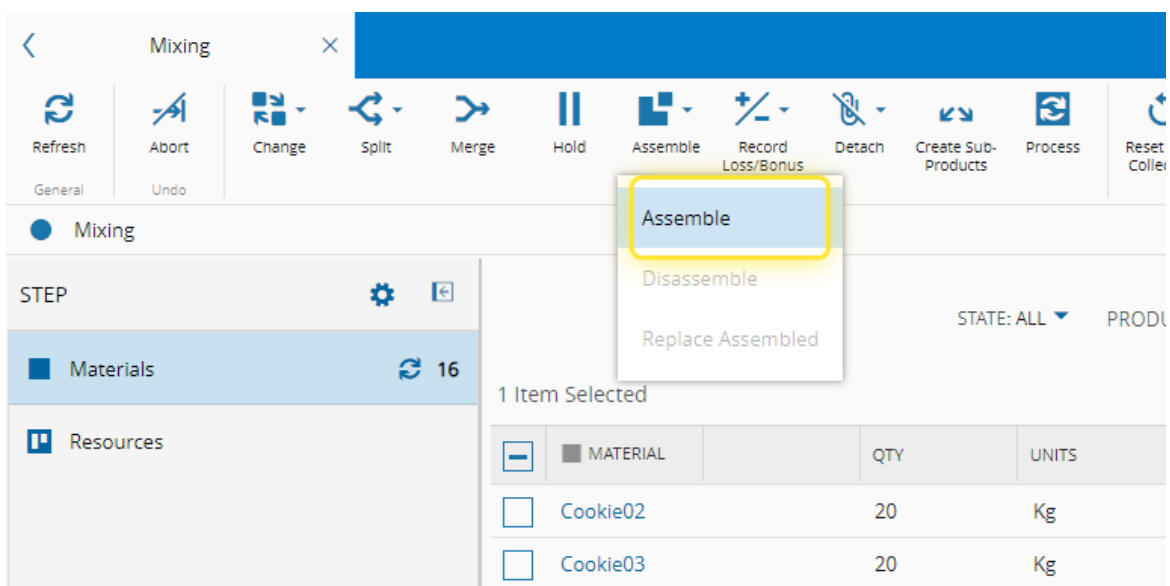


9. Enter the Quantity to Assemble and select Next.


This example contemplates the Explicit Assembly Type.

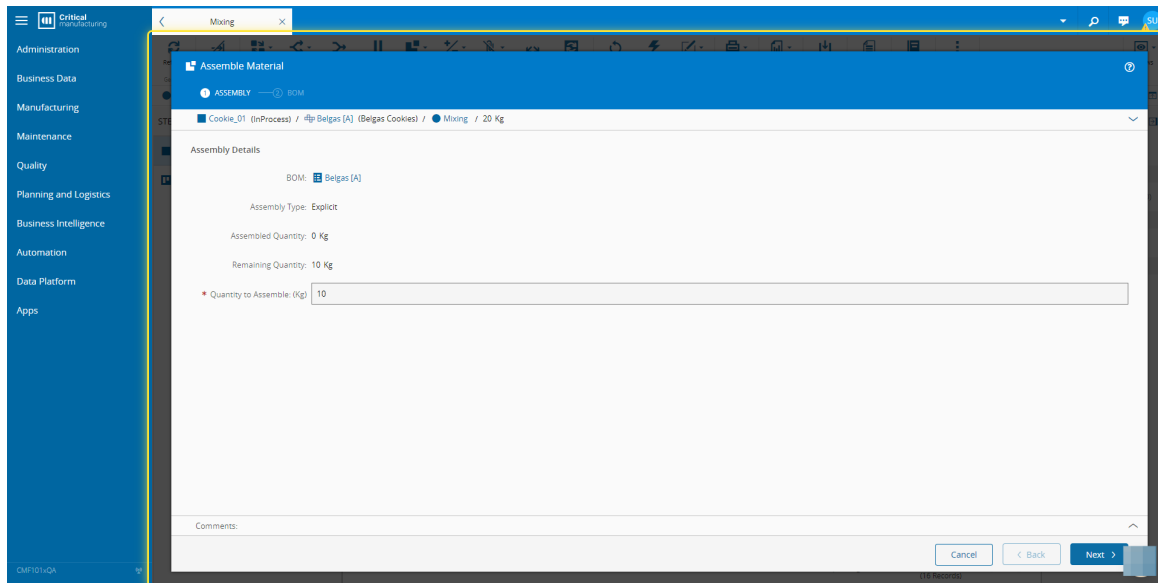


10. Select the Product you want.

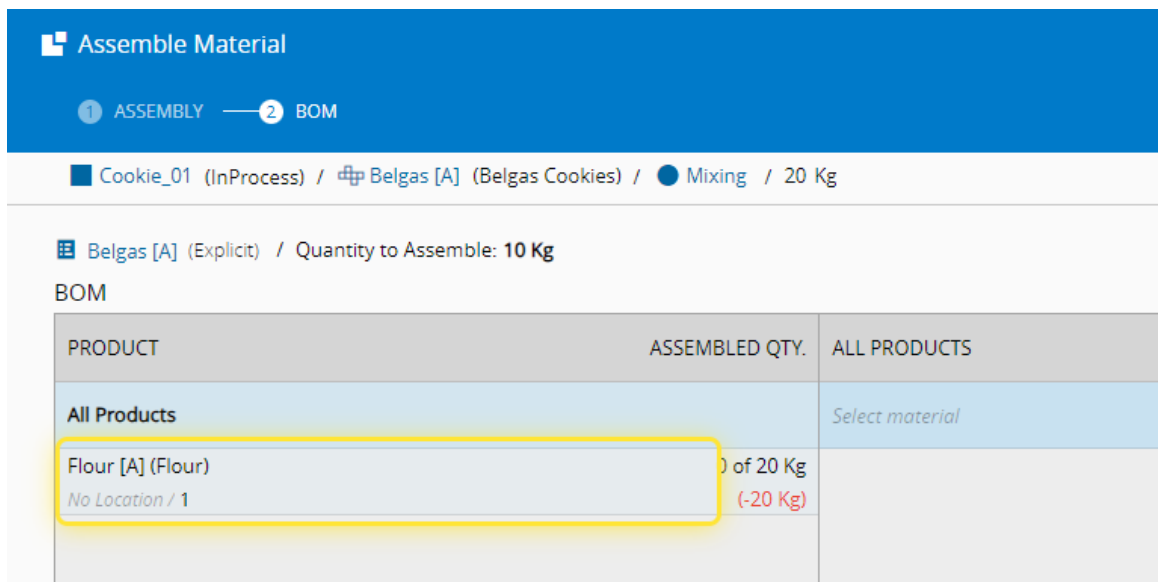

11. Select the Add icon

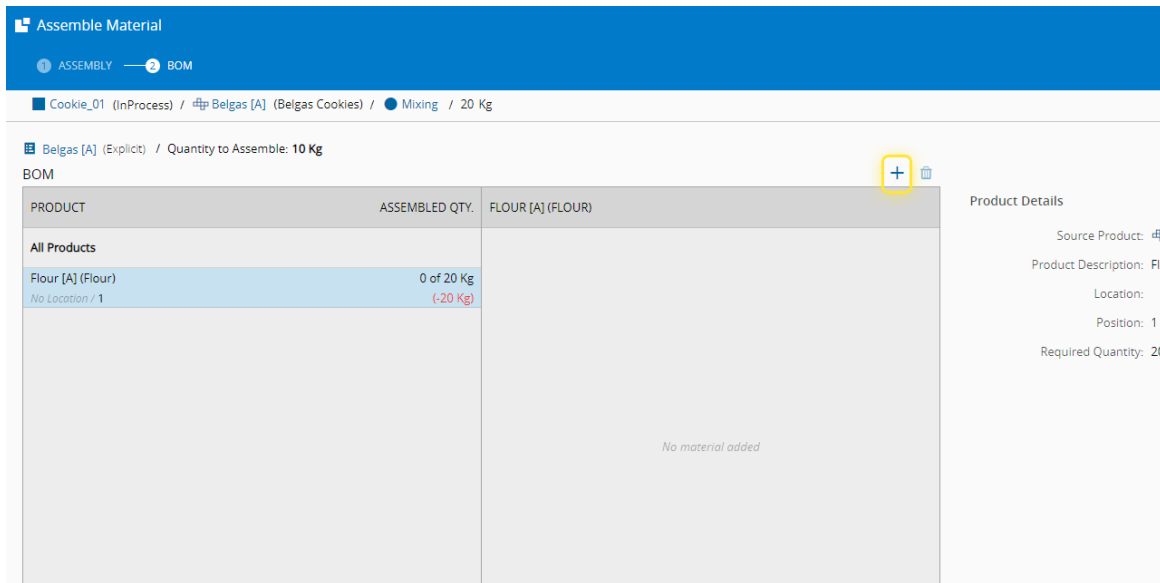

12. Complete the necessary Material Details and select Assemble.

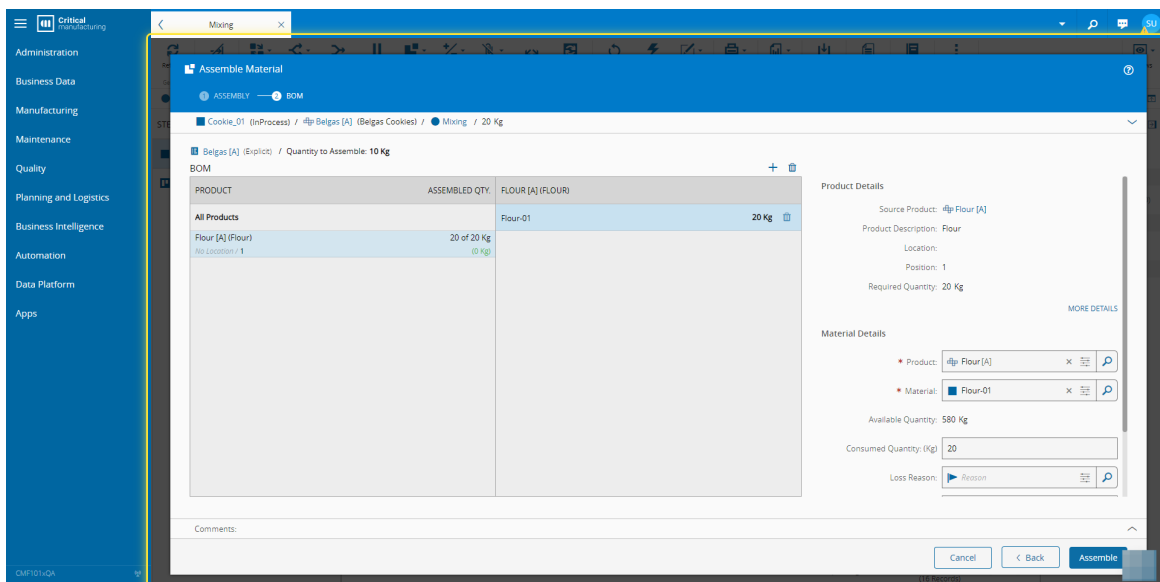



Legal Information

Disclaimer

The information contained in this document represents the current view of Critical Manufacturing on the issues discussed as of the date of publication. Because Critical Manufacturing must respond to changing market conditions, it should not be interpreted to be a commitment on the part of Critical Manufacturing, and Critical Manufacturing cannot guarantee the accuracy of any information presented after the date of publication. This document is for informational purposes only.

Critical Manufacturing makes no warranties, express, implied or statutory, as to the information herein contained.

Confidentiality Notice

All materials and information included herein are being provided by Critical Manufacturing to its Customer solely for Customer internal use for its business purposes. Critical Manufacturing retains all rights, titles, interests in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Critical Manufacturing and the Customer must not disclose or transfer by any means any of these materials or information, whether total or partial, to any third party without the prior explicit consent by Critical Manufacturing.

Copyright Information

All title and copyrights in and to the Software (including but not limited to any source code, binaries, designs, specifications, models, documents, layouts, images, photographs, animations, video, audio, music, text incorporated into the Software), the accompanying printed materials, and any copies of the Software, and any trademarks or service marks of Critical Manufacturing are owned by Critical Manufacturing unless explicitly stated otherwise. All title and intellectual property rights in and to the content that may be accessed through use of the Software is the property of the respective content owner and is protected by applicable copyright or other intellectual property laws and treaties.

Trademark Information

Critical Manufacturing is a registered trademark of Critical Manufacturing.

All other trademarks are property of their respective owners.