


How to Create a Maintenance Plan

1. Go to your MES home page

Open MES and go to the **home page**.

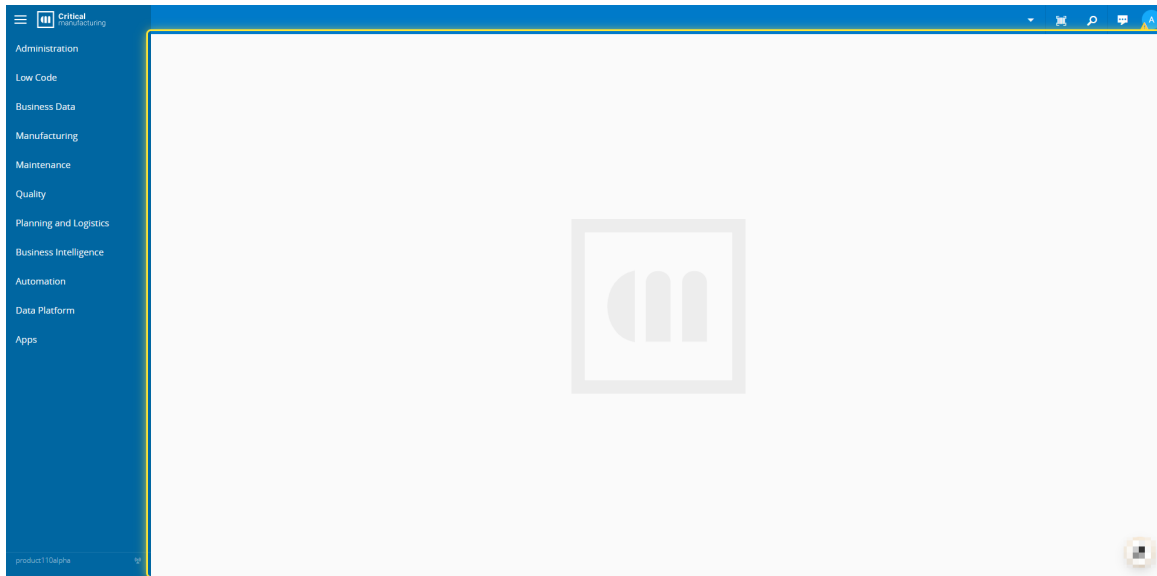


2. Business Data

From the menu, select the option **Business Data** .




3. Maintenance Plan

From the tiles menu with all the options available, select **Maintenance Plan**

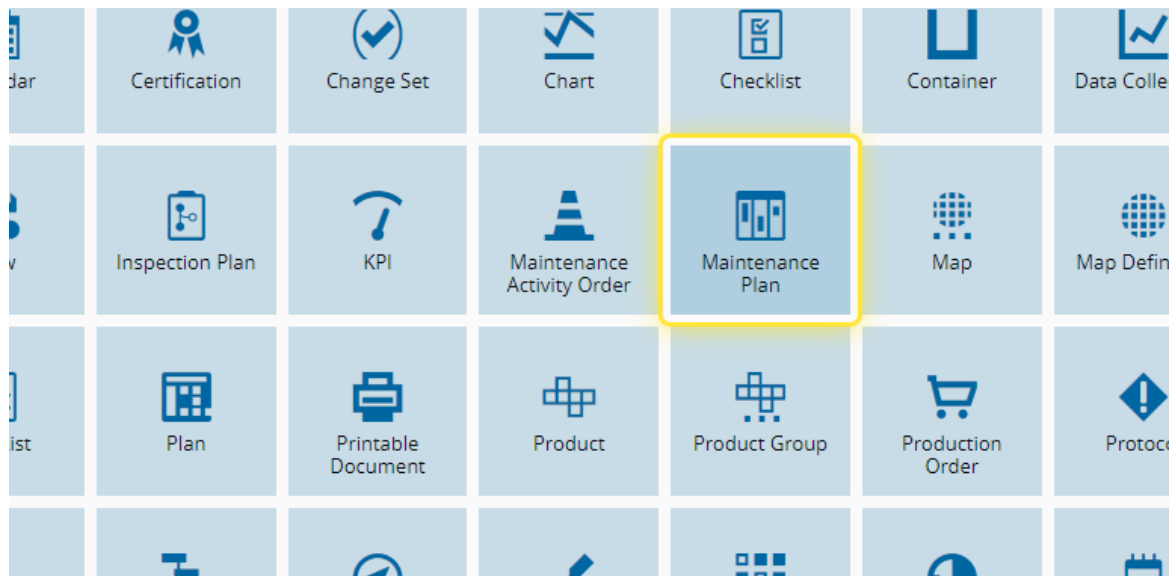


4. New

Select **New** to create a new Maintenance Plan.

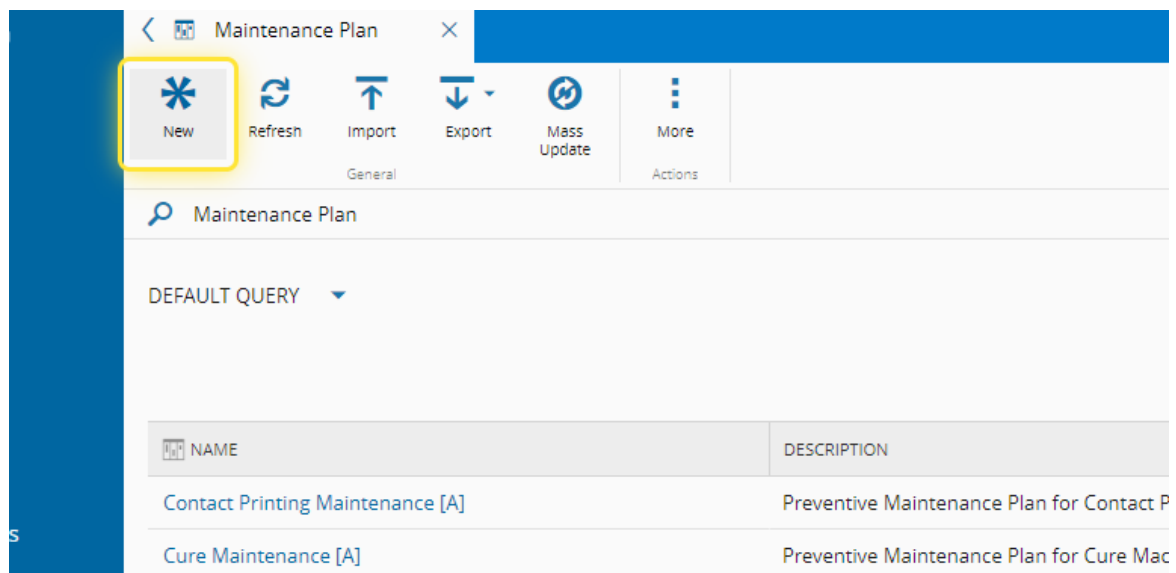

5. Name the Maintenance Plan

Provide a name for the **Maintenance Plan** .

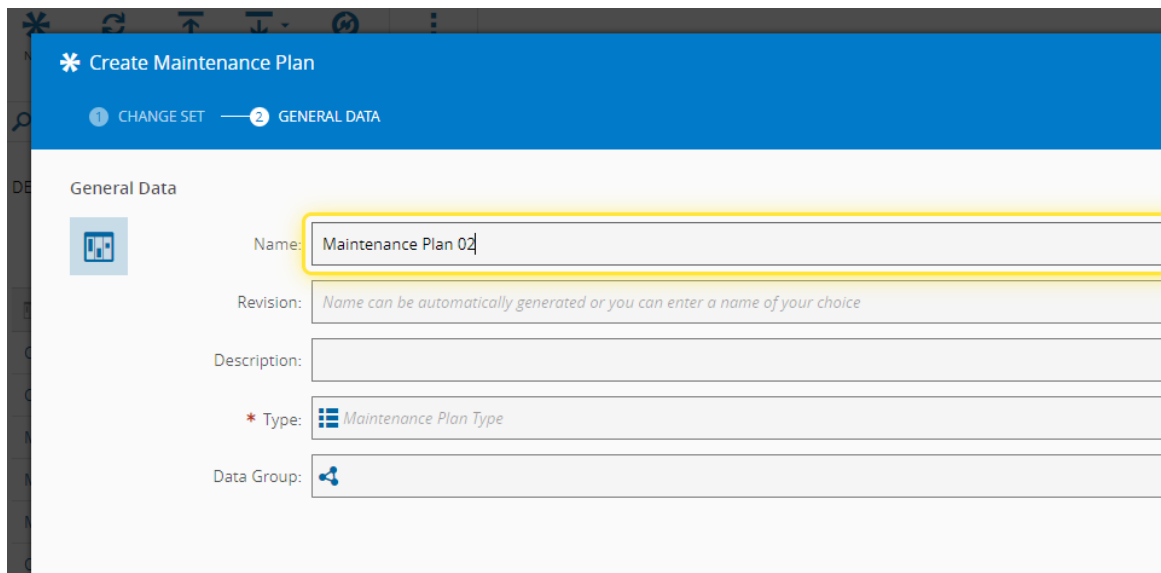

* Create Maintenance Plan

1 CHANGE SET — 2 GENERAL DATA

General Data

Name: Maintenance Plan 02

Revision: *Name can be automatically generated or you can enter a name of your choice*


Description:

* Type: Maintenance Plan Type

Data Group:

6. Add a description (Optional)

Optionally, enter a **description** .

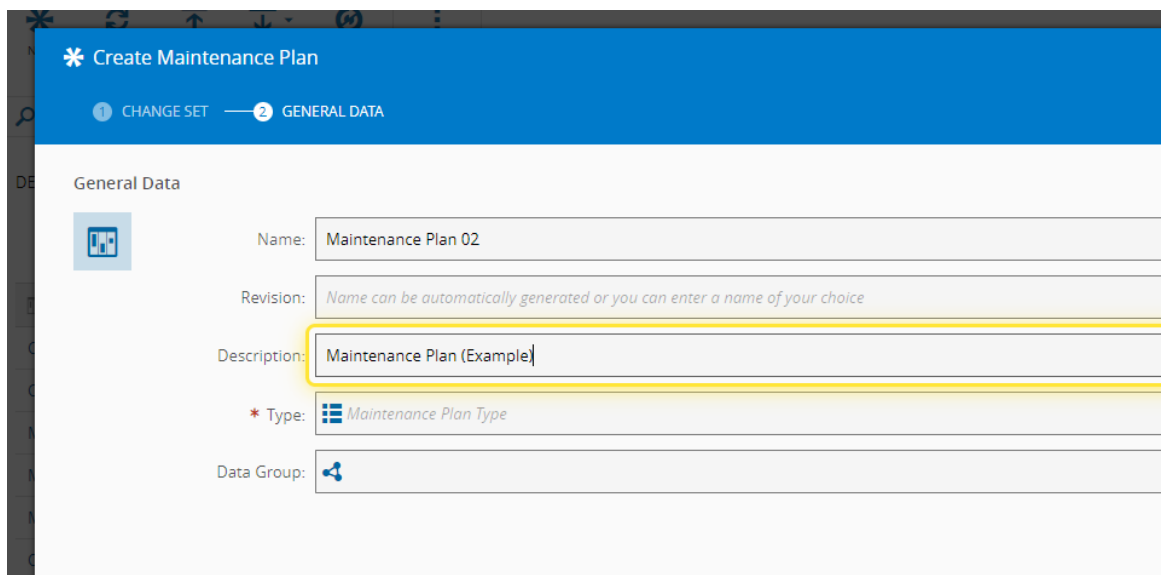

* Create Maintenance Plan

1 CHANGE SET — 2 GENERAL DATA

General Data

Name: Maintenance Plan 02

Revision: *Name can be automatically generated or you can enter a name of your choice*


Description: Maintenance Plan (Example)

* Type: Maintenance Plan Type

Data Group:

7. Select the Maintenance Plan type

Select the **Maintenance Plan type** . The list of possible values is taken from the lookup table Maintenance PlanType.

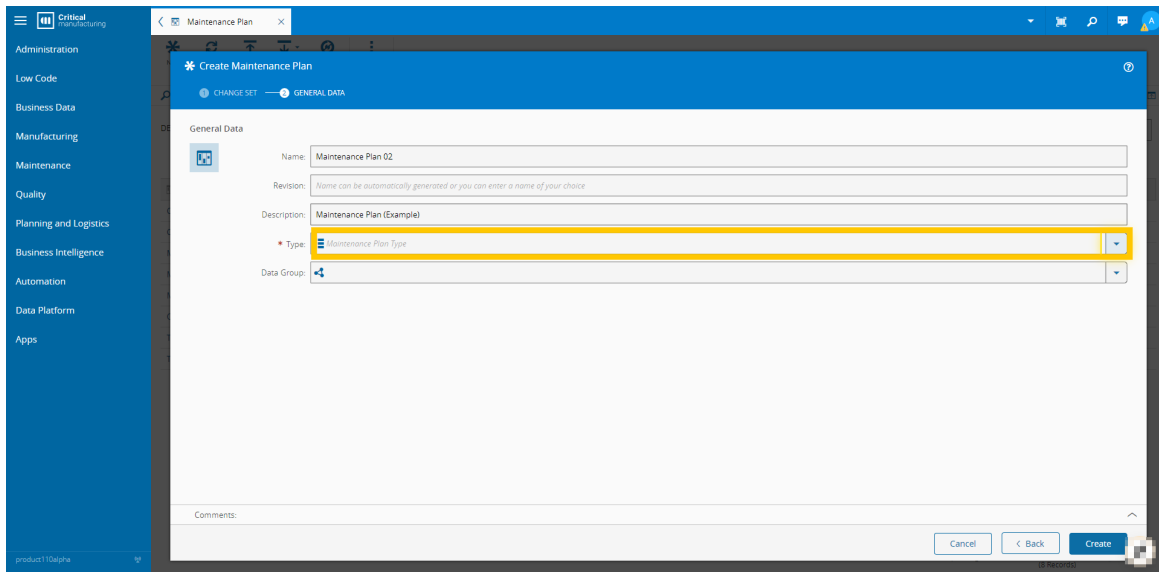

8. Select on Create

Select **Create** to complete the operation and the new Maintenance Plan will be created.

