

How to: Remove Materials from Container

1. Go to the Business Data menu.



2. Select the Material entity.

You can also manage the Materials in a Container through the container object itself. This guide walks you through the process considering a Material's point of view.




3. Select the desired Material.

Material



DEFAULT QUERY ▾

NAME	DESCRIPTION
AcetylsalicylicAcid-01	AcetylsalicylicAcid-01
AmmoniumPhosphate-01	AmmoniumPhosphate-01
Bolacha01	Bolacha01
Bolacha01.1	Bolacha01.1
Bolacha01.2	Bolacha01.2

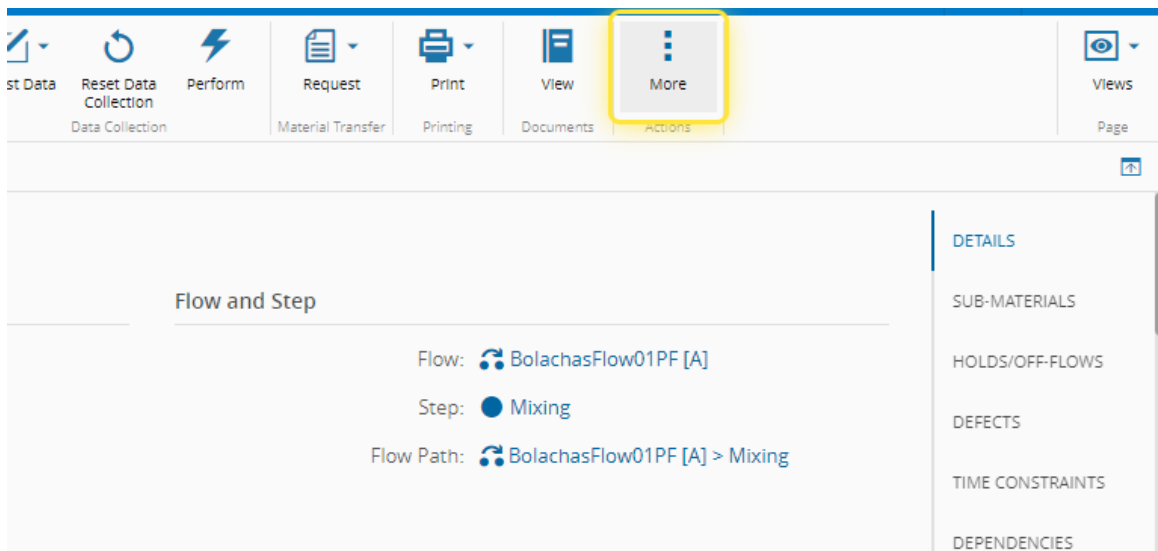4. Select the More button.




The screenshot shows the software interface with a toolbar at the top. The 'More' button, represented by a vertical ellipsis icon, is highlighted with a yellow box. Below the toolbar, the 'Flow and Step' section is visible, showing the following information:

- Flow:  BolachasFlow01PF [A]
- Step: ● Mixing
- Flow Path:  BolachasFlow01PF [A] > Mixing


On the right side, there is a sidebar with the following menu items: DETAILS, SUB-MATERIALS, HOLDS/OFF-FLOWS, DEFECTS, TIME CONSTRAINTS, and DEPENDENCIES.

5. Select the Remove option on the Container section.

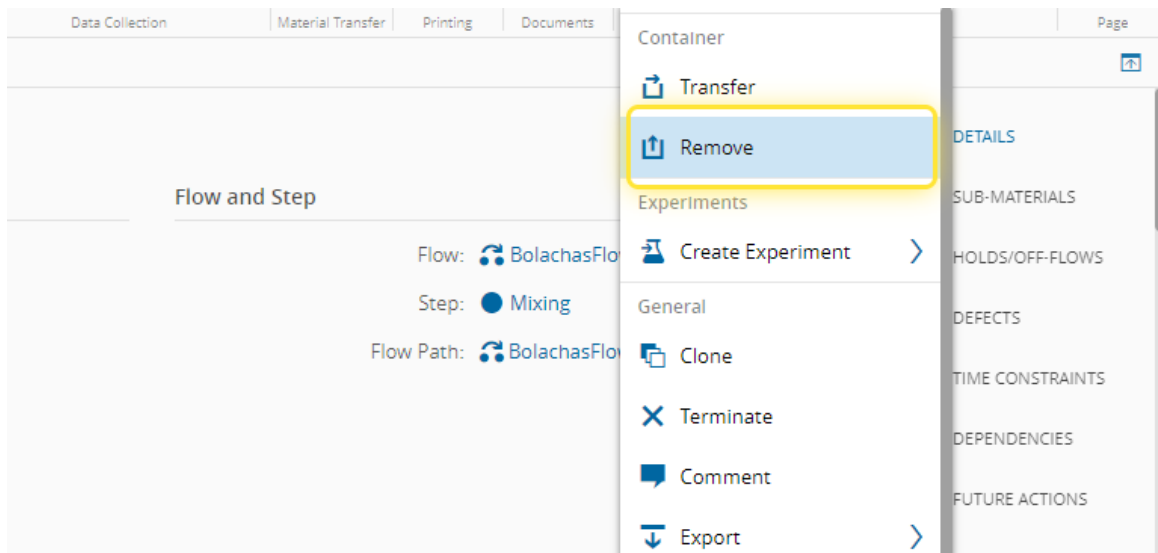

6. Under the Remove Material from Container wizard validate the material to remove.

For more information, see [Remove Material from Container - Critical Manufacturing Documentation Portal](#)

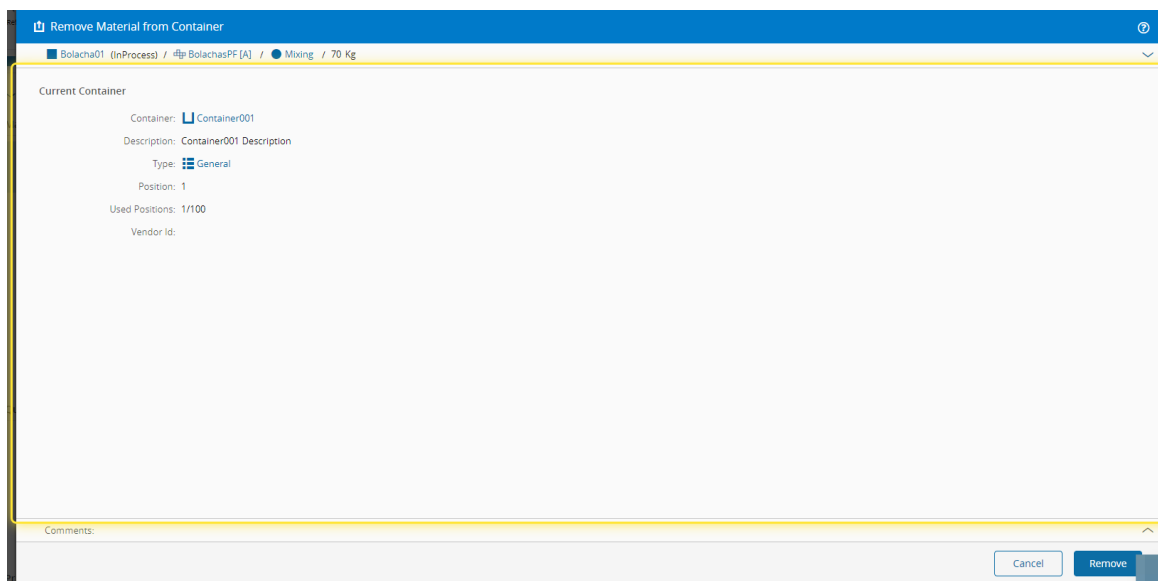

7. Select the Remove button.

