


How to: Manage Resource Durables


1. Go to the Business Data menu.



2. Select the Resource entity.

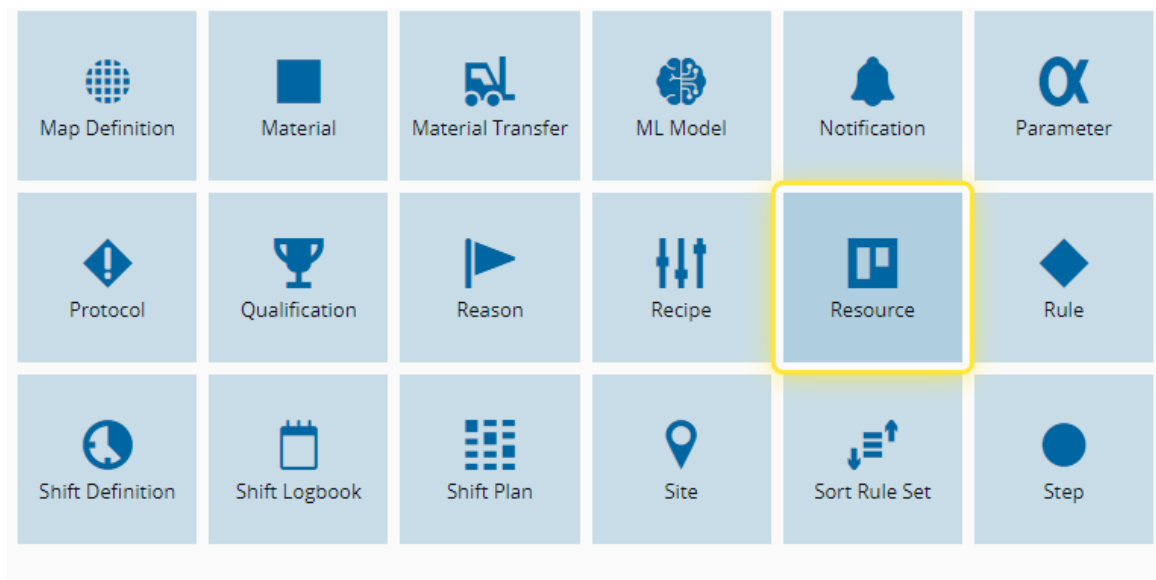


3. Select the Resource.

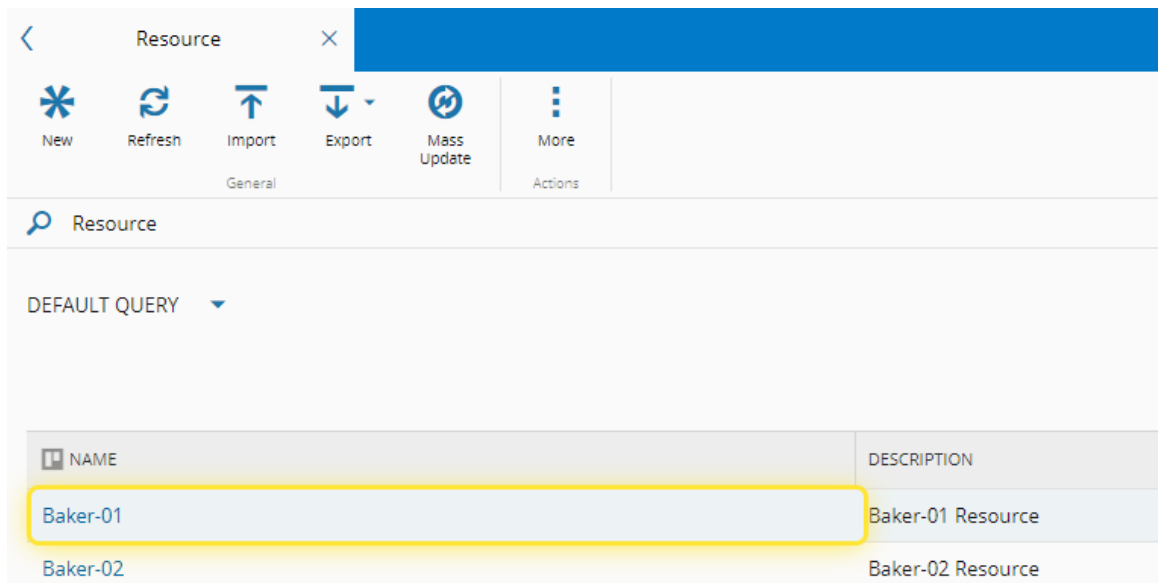


4. Select the Durables section.

You can also manage durables via the Manage button on the top ribbon by selecting Durables in the dropdown options.

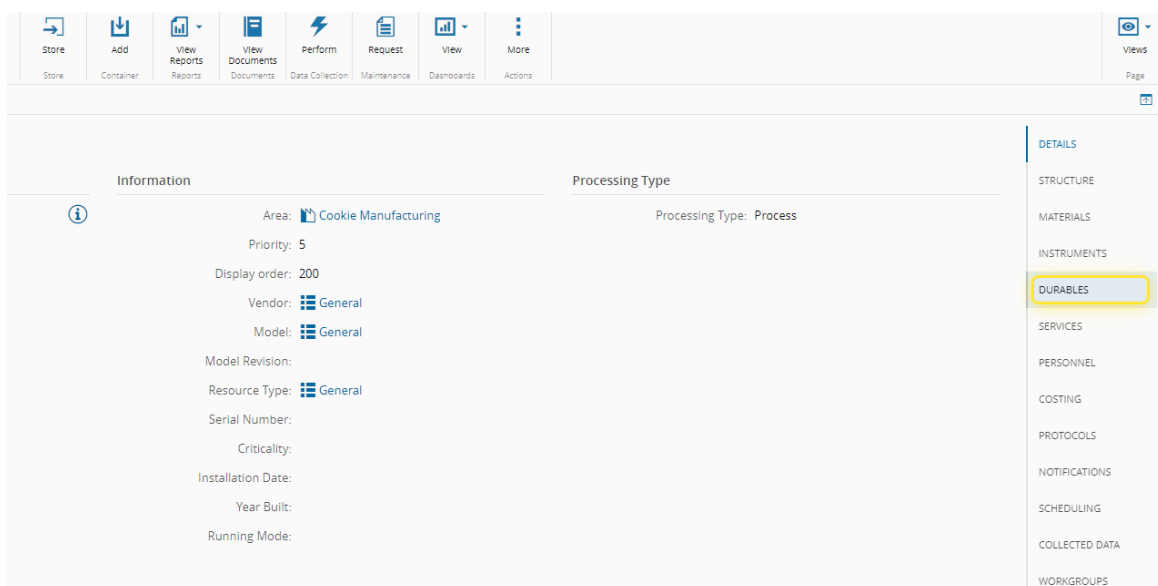

5. Select the Manage button.

For more information, see [Manage Resource Durables - Critical Manufacturing Documentation Portal](#)

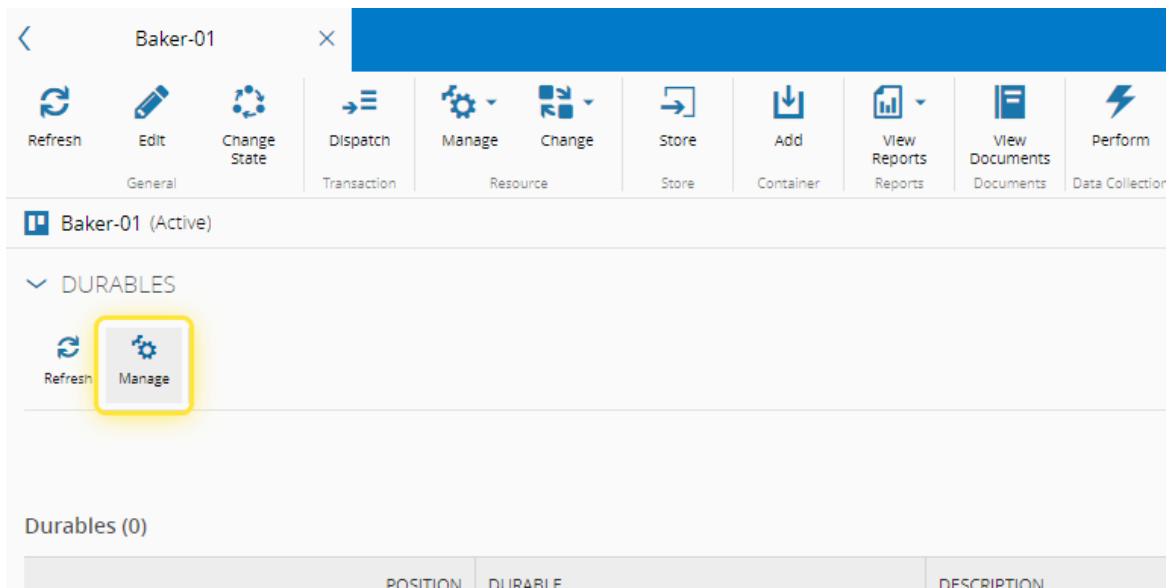

6. Complete the necessary fields and select Update.

You can set the Resource to have as many Durable Positions as you need.

