



## How to: Disassemble an Assembled Material


1. Go to the Business Data menu.

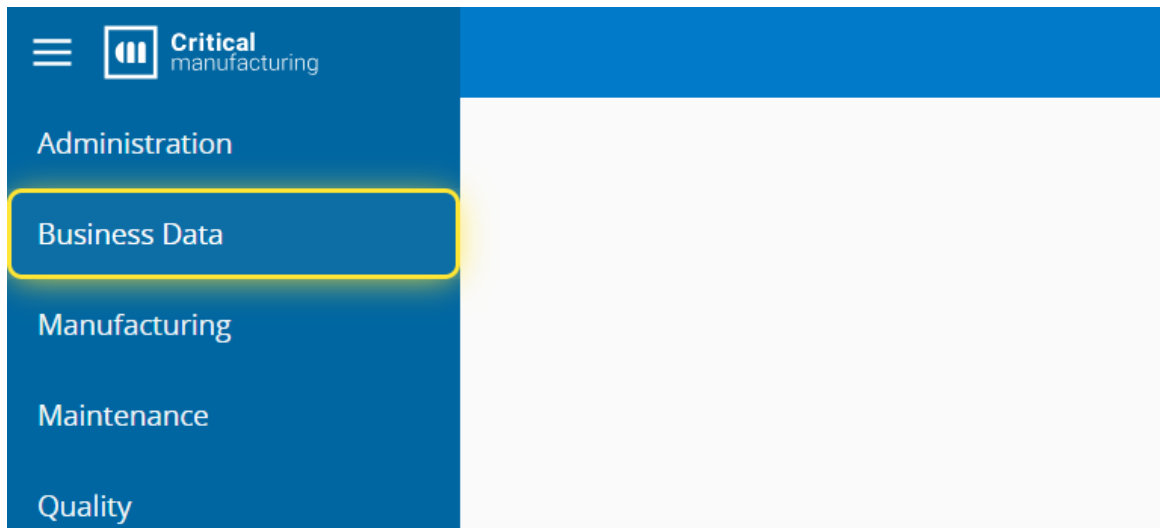

2. Select the Material entity.

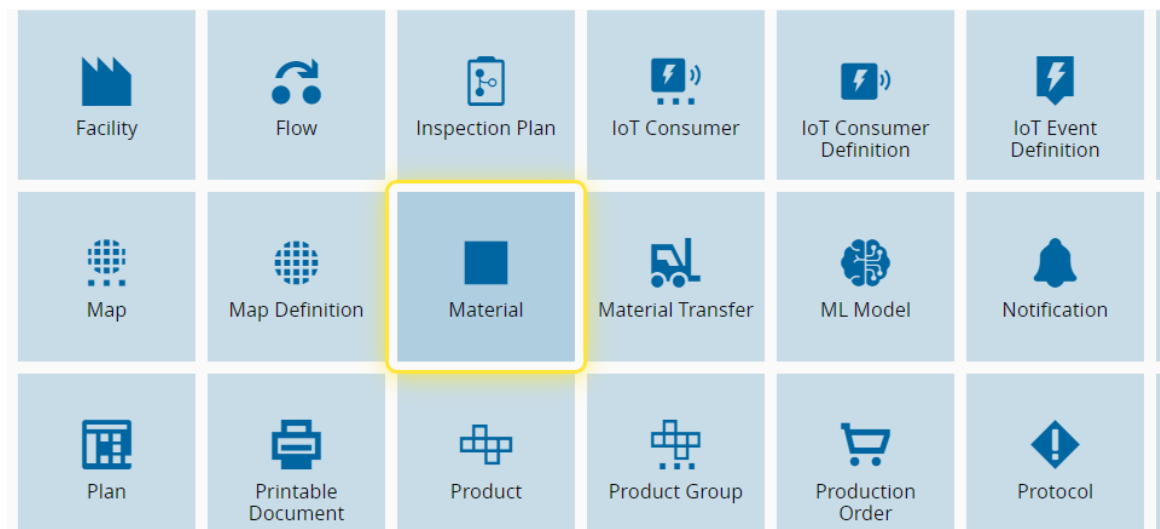


3. Select the desired Material.

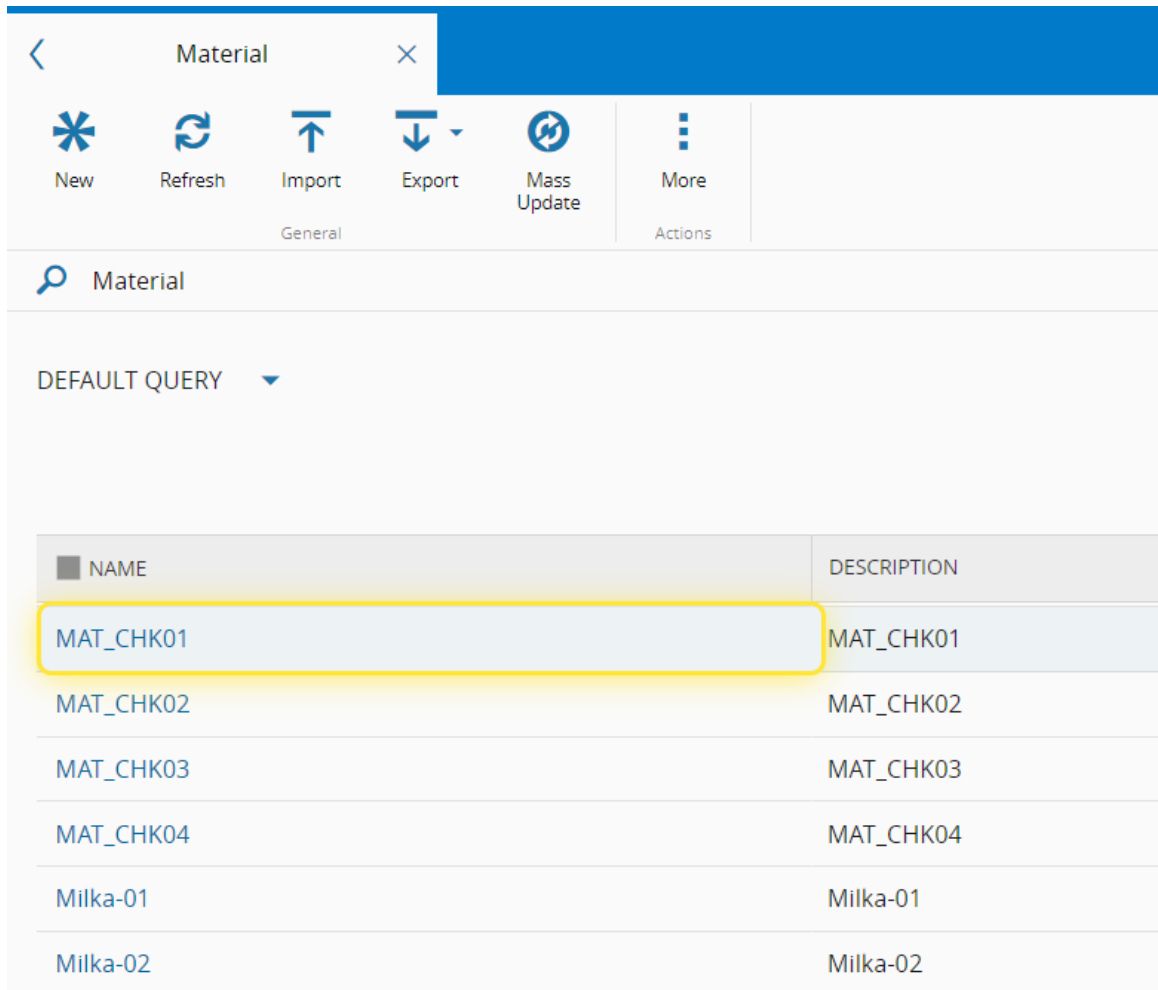


NAME	DESCRIPTION
MAT_CHK01	MAT_CHK01
MAT_CHK02	MAT_CHK02
MAT_CHK03	MAT_CHK03
MAT_CHK04	MAT_CHK04
Milka-01	Milka-01
Milka-02	Milka-02

4. Select the Assemble button.

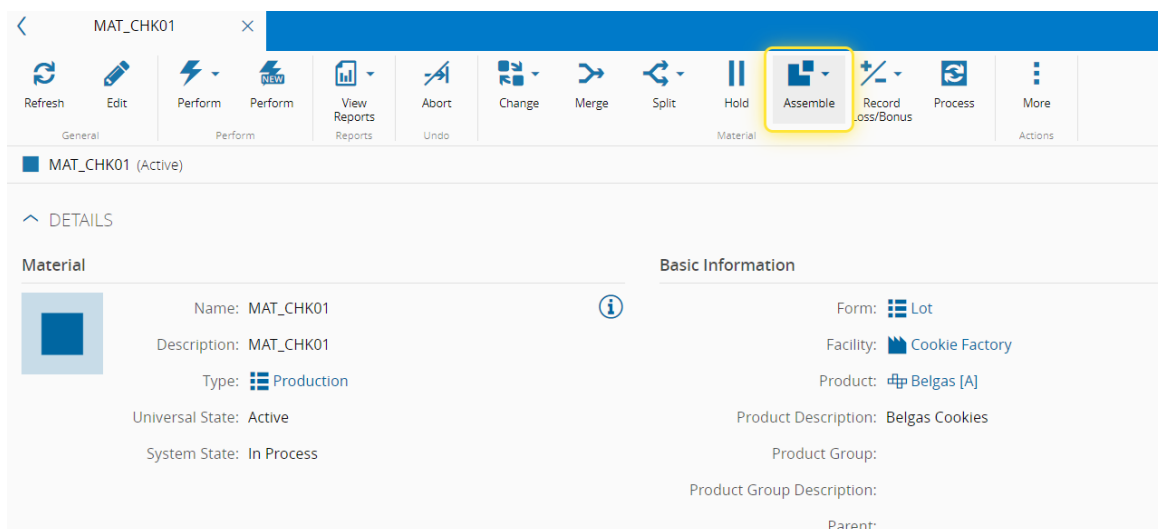


Material	Basic Information
<p>Name: MAT_CHK01</p> <p>Description: MAT_CHK01</p> <p>Type: Production</p> <p>Universal State: Active</p> <p>System State: In Process</p>	<p>Form: Lot</p> <p>Facility: Cookie Factory</p> <p>Product: Belgas [A]</p> <p>Product Description: Belgas Cookies</p> <p>Product Group:</p> <p>Product Group Description:</p> <p>Parent:</p>

5. Select the Disassemble option.

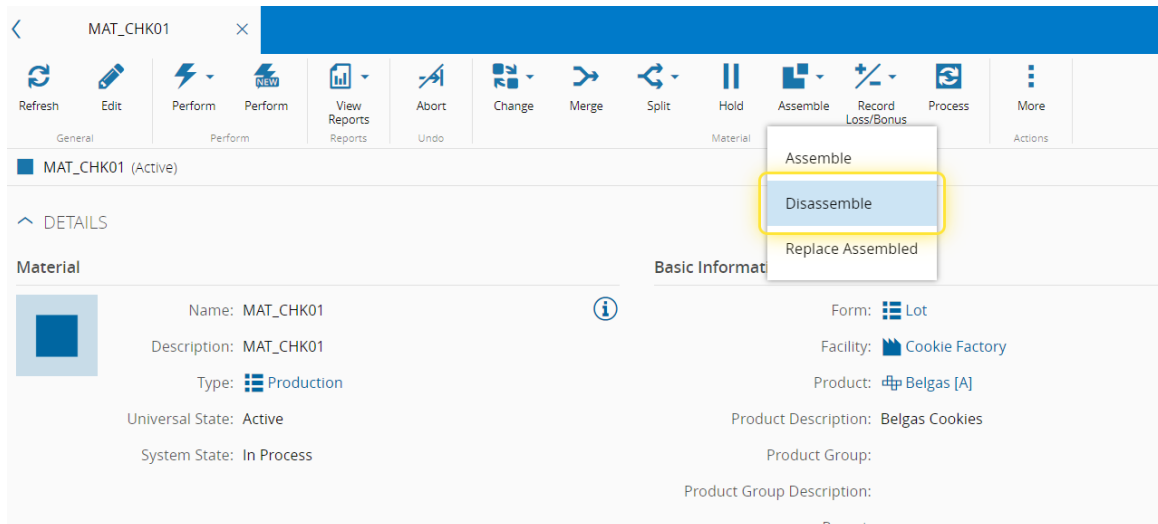

6. Under the Disassemble Material wizard you can manage the material to disassemble.

For more information, see [Disassemble Material - Critical Manufacturing Documentation Portal](#). 

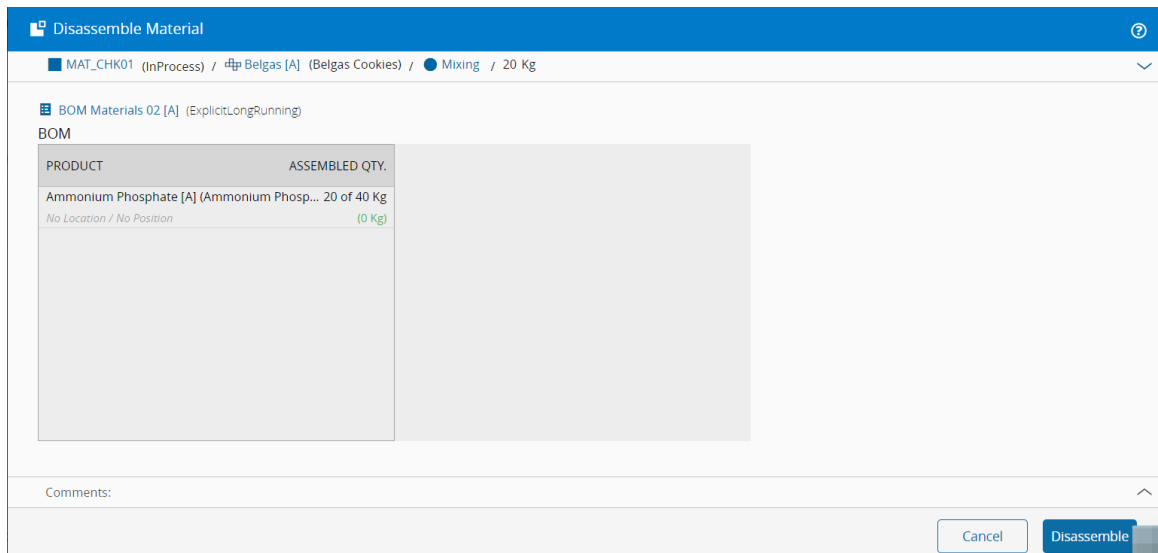

7. Indicate the quantity to disassemble and other options if applicable.

AMMONIUM PHOSPHATE)

2 Kg

Current quantity:  
979 Kg

\* Disassembled Quantity: (Kg)

2

Loss Reason:

Reason

Loss Quantity: (Kg)

8. Select the Disassemble button.

2

Loss Reason:

Reason

Loss Quantity: (Kg)

Cancel Disassemble