

How to: Remove Materials from Container

1. Go to the Business Data menu.



2. Select the Material entity.

You can also manage the Materials in a Container through the container object itself. This guide walks you through the process considering a Material's point of view.




3. Select the desired Material.

Material

DEFAULT QUERY ▾

NAME	DESCRIPTION
AcetylsalicylicAcid-01	AcetylsalicylicAcid-01
AmmoniumPhosphate-01	AmmoniumPhosphate-01
Bolacha01	Bolacha01
Bolacha01.1	Bolacha01.1
Bolacha01.2	Bolacha01.2

4. Select the More button.

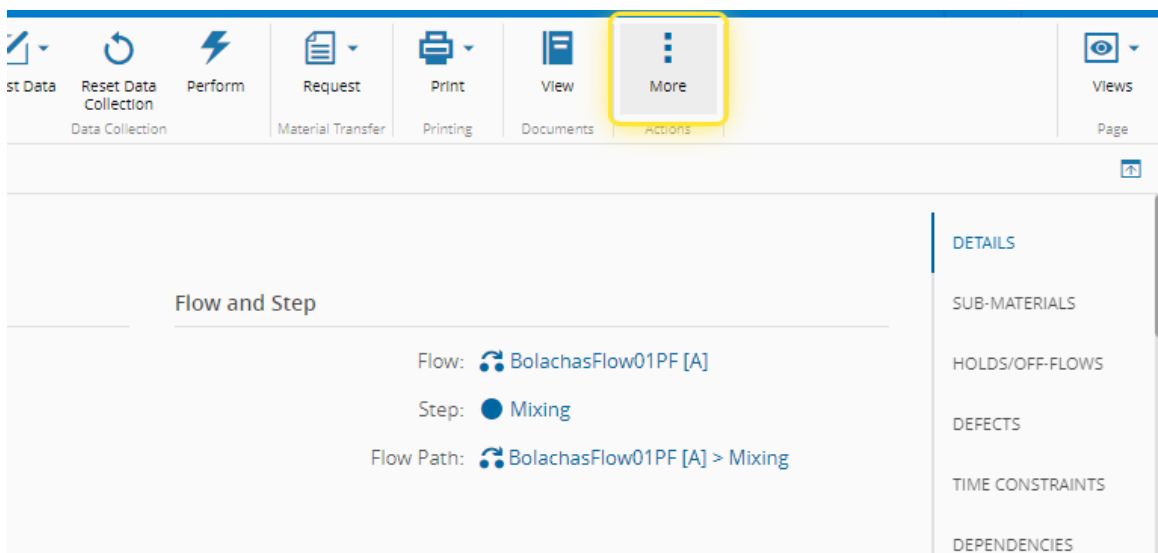


The screenshot shows the software interface with the 'More' button highlighted in the top toolbar. Below the toolbar, the 'Flow and Step' section is visible, showing the following information:

- Flow: BolachasFlow01PF [A]
- Step: Mixing
- Flow Path: BolachasFlow01PF [A] > Mixing


On the right side, there is a vertical menu with the following options: DETAILS, SUB-MATERIALS, HOLDS/OFF-FLOWS, DEFECTS, TIME CONSTRAINTS, and DEPENDENCIES.

5. Select the Remove option on the Container section.

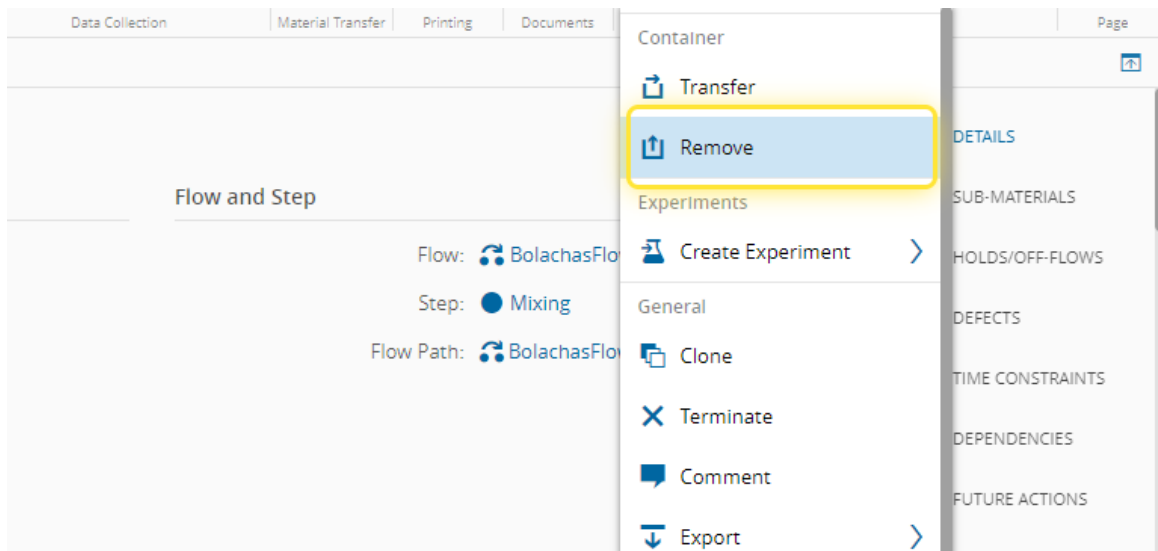

6. Under the Remove Material from Container wizard validate the material to remove.

For more information, see [Remove Material from Container - Critical Manufacturing Documentation Portal](#)

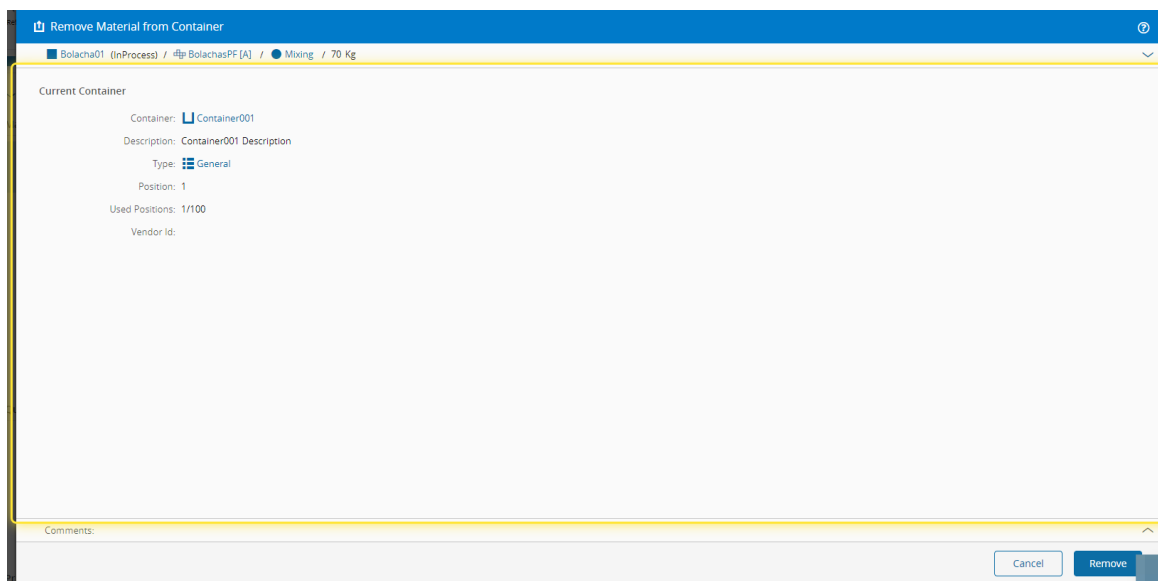

7. Select the Remove button.

