


## How to: Transfer Material Between Containers

1. Go to the Business Data menu.



2. Select the Container button.

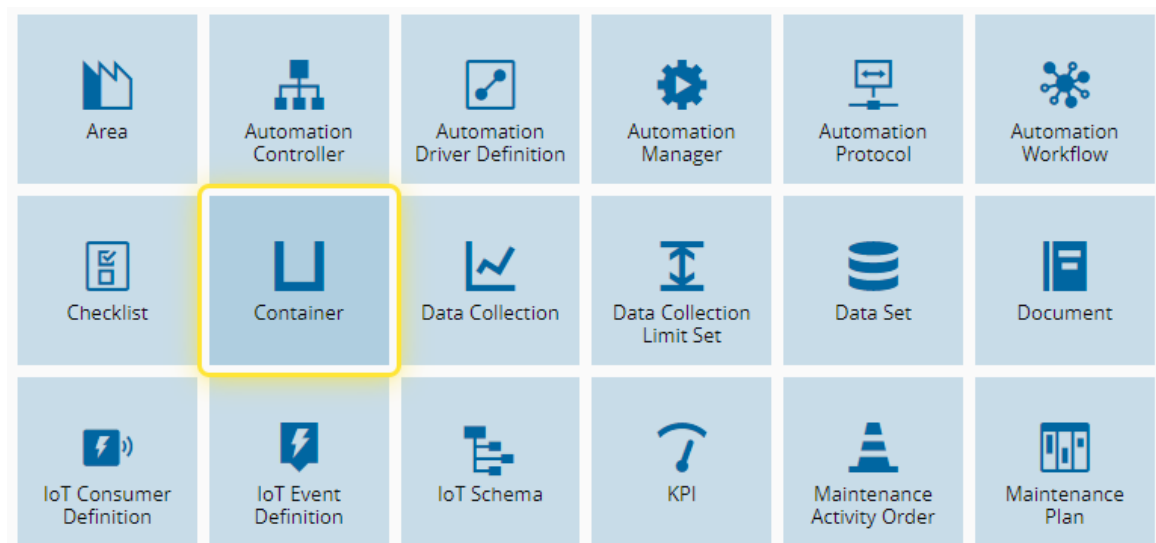


3. Select the desired Container.

Container

DEFAULT QUERY ▾


NAME	DESCRIPTION
Container001	Container00
Container002	Container00
Container003	Container00

4. Select the Transfer Materials button.

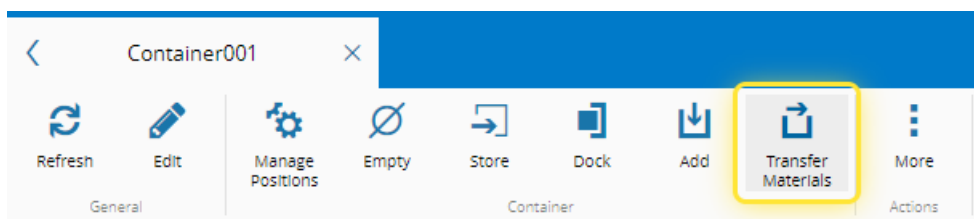


5. Under the Transfer Material Container select the position to transfer.

For more information, see [Transfer Material Between Containers - Critical Manufacturing Documentation Portal](#)

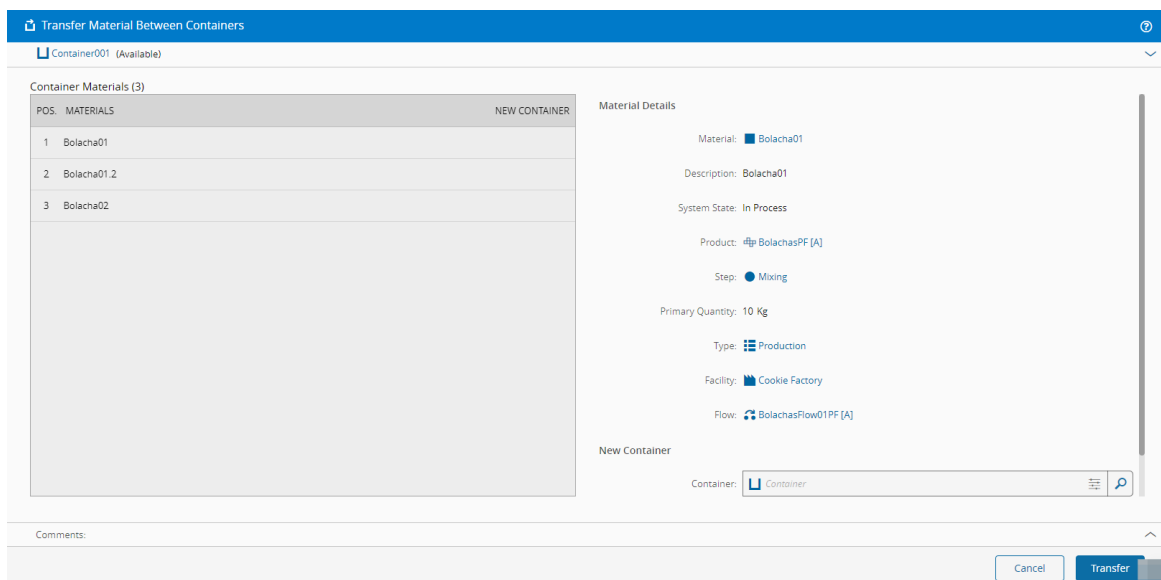

6. Select the Container to receive the materials in the position selected.

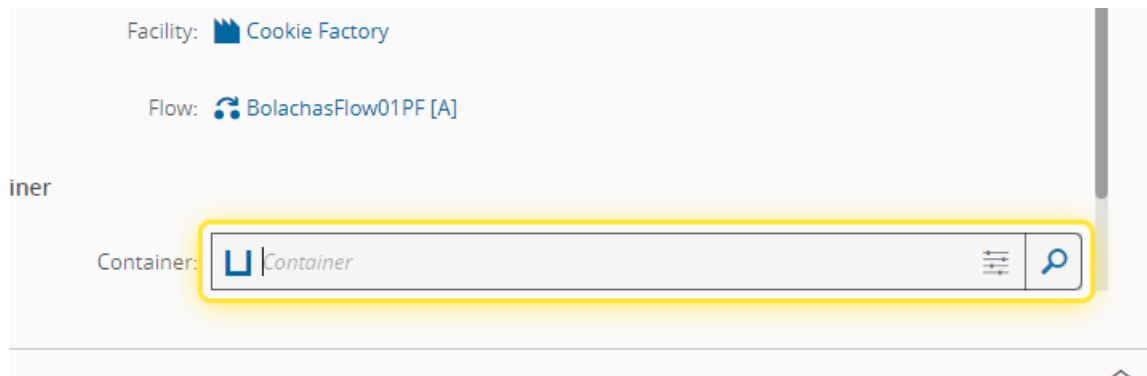

7. Select the Transfer button to apply the changes.

