


How to: Change Resource State


1. Go to the Business Data menu.



2. Select the Resource entity.

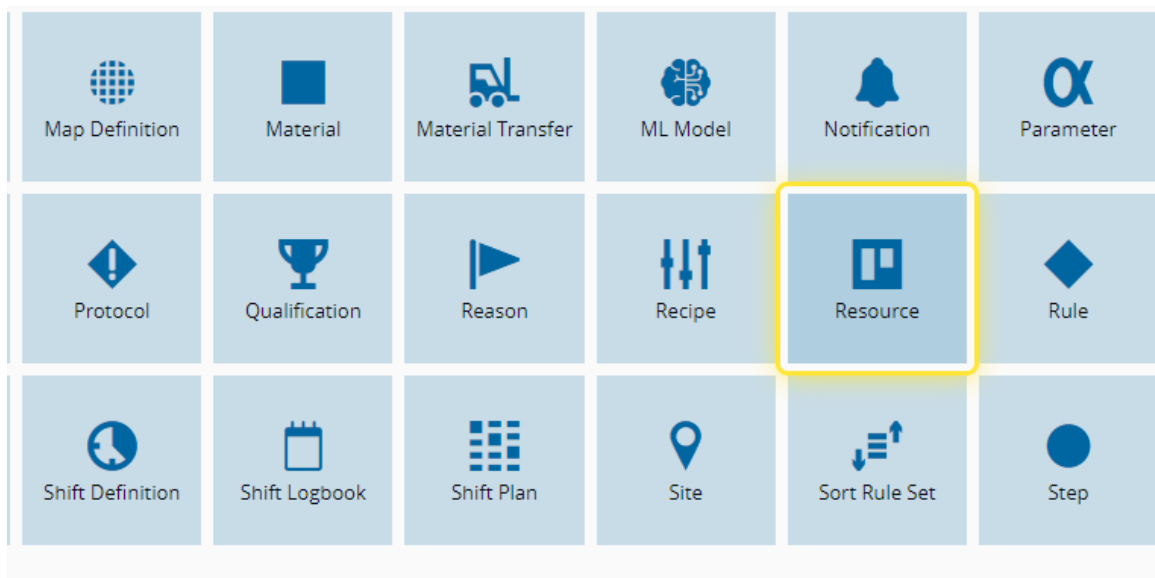


3. Select the Resource.

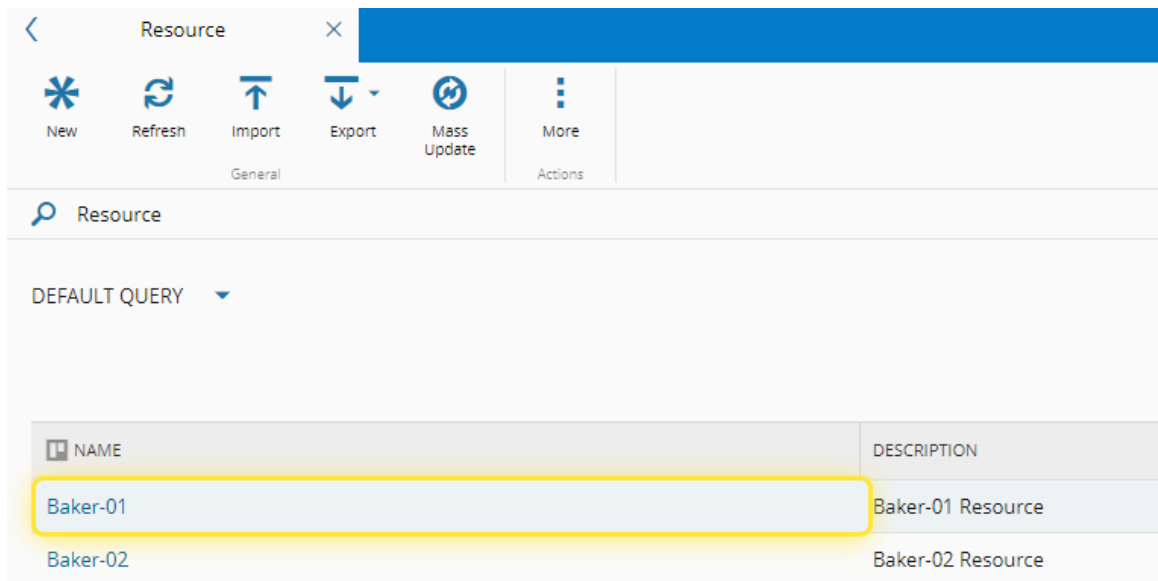

4. Select the Change State button.

For more information, see [Change Resource State - Critical Manufacturing Documentation Portal](#)

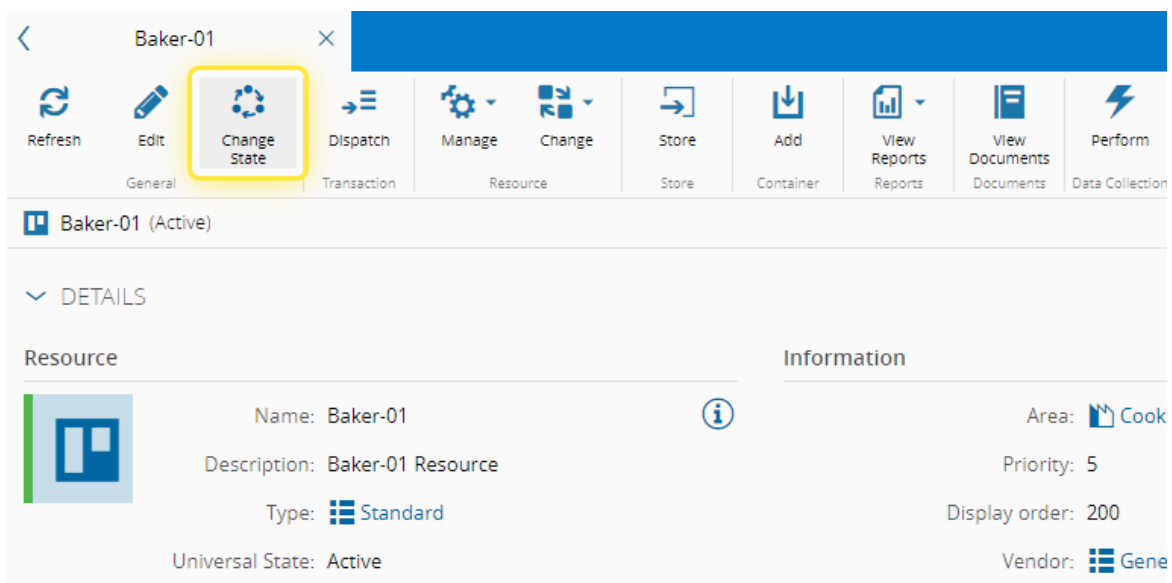

5. Select the needed State followed by Change State.

Change State

STATE SELECTION

Baker-01 (Up) / SEMI E10 - Standby

New State:

- Standby (current)
Standby to Standby (current)
- Nonscheduled
Standby to Nonscheduled
- Scheduled Down
Standby to Scheduled Down
- Engineering
Standby to Engineering
- Productive
Standby to Productive
- Unscheduled Down
Standby to Unscheduled Down

Comments:

Cancel Change State