

How to: Enable Smart Table's Change Control

11.1

January 2026

DOCUMENT ACCESS

Public

DISCLAIMER


The contents of this document are under copyright of Critical Manufacturing S.A. it is released on condition that it shall not be copied in whole, in part or otherwise reproduced (whether by photographic, or any other method) and the contents therefore shall not be divulged to any person other than that of the addressee (save to other authorized offices of his organization having need to know such contents, for the purpose for which disclosure is made) without prior written consent of submitting company.

How to: Enable Smart Table's Change Control


1. Go to the Administration menu.



2. Select the Tables object.

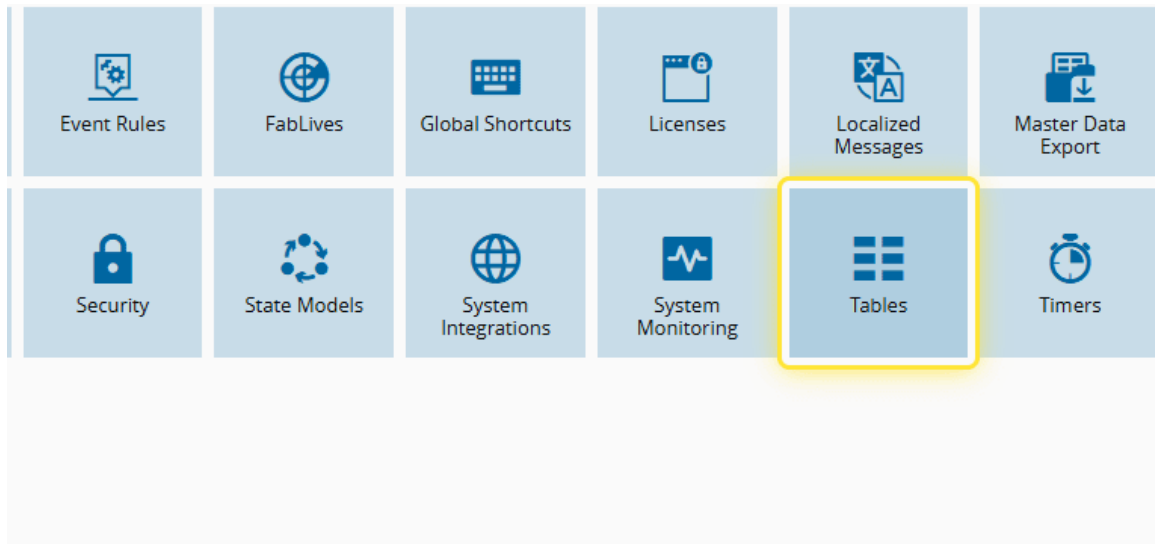


3. Go to the Smart Tables.

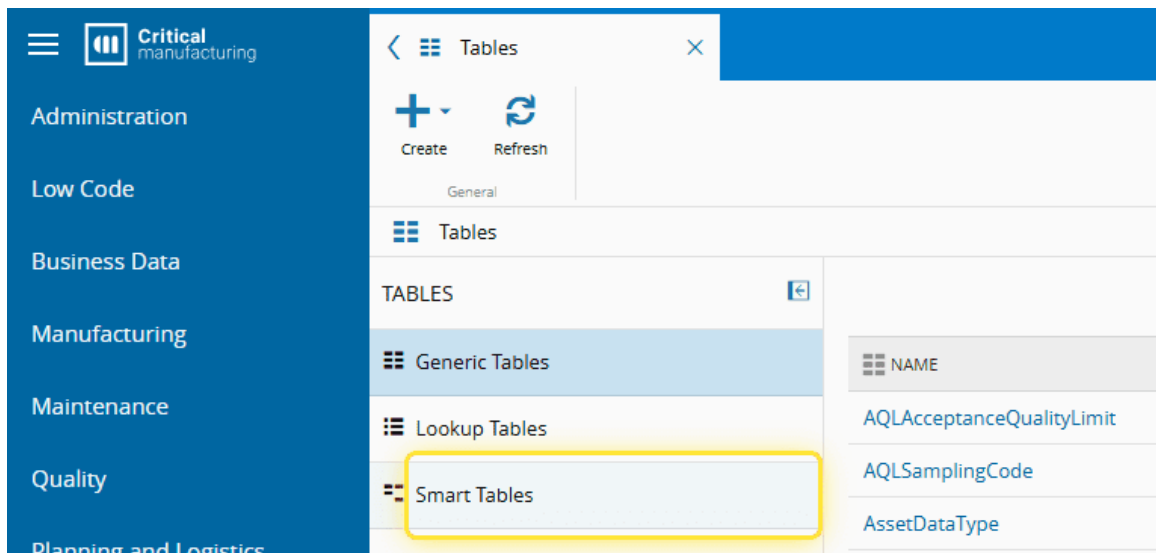


4. Select a Smart Table.

NAME	DESCRIPTION
ApplicationSettingsContext	Used to resolve application settings (e.g. Background)
AreaPrintableDocumentContext	Used to obtain a list of PrintableDocuments for a c
BOMContext	Used to attach a specific BOM to a specific context
ChangeSetApprovalContext	Used to resolve a specific change set approval worl
FactoryAutomationControllerVersionOverrideContext	Used to resolve FactoryAutomation Controller vers
IntegrationHandlerResolution	Used to resolve the integration handler
KeyboardShortcut	Used to resolve keyboard shortcuts for performing
LayoutPersonalizationContext	Used to resolve layout personalization settings (e.g
MapDefinitionContext	Used to attach a specific Map Definition to a specifi


5. Select Views.

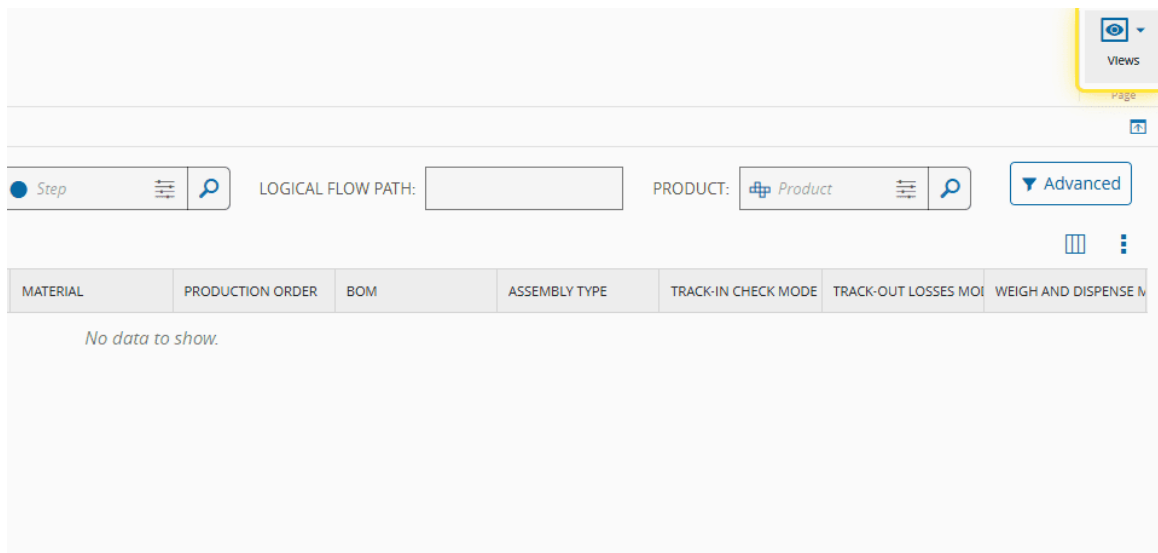

6. In Views, select Definition.

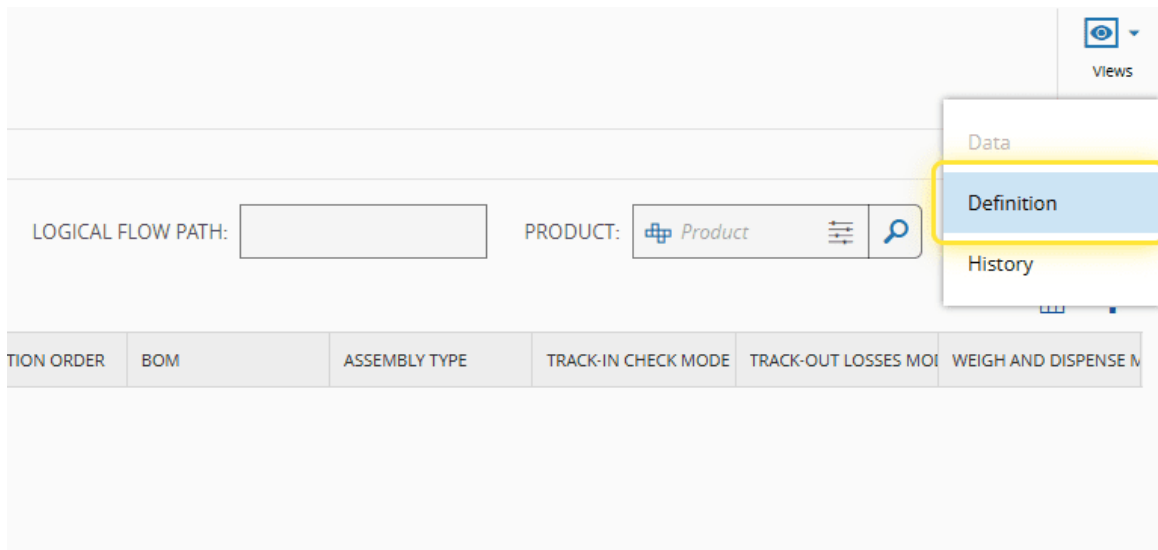

7. Select the Edit button.

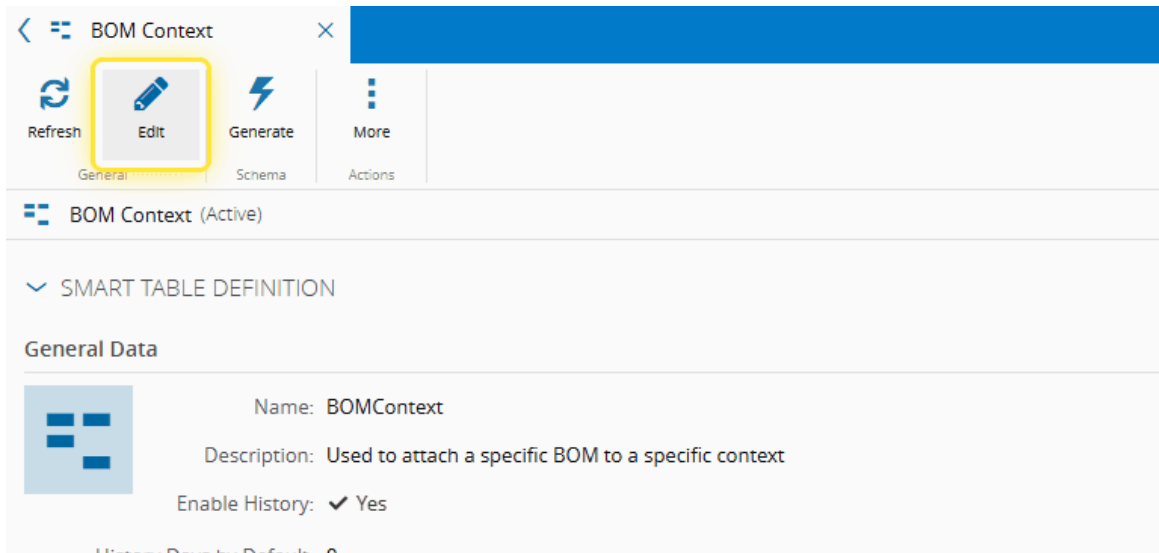

BOM Context

Refresh Edit Generate More

BOM Context (Active)

SMART TABLE DEFINITION

General Data


Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History: ☒ Yes

History Days by Default: 0

8. Set the Enable Change Control property to true.

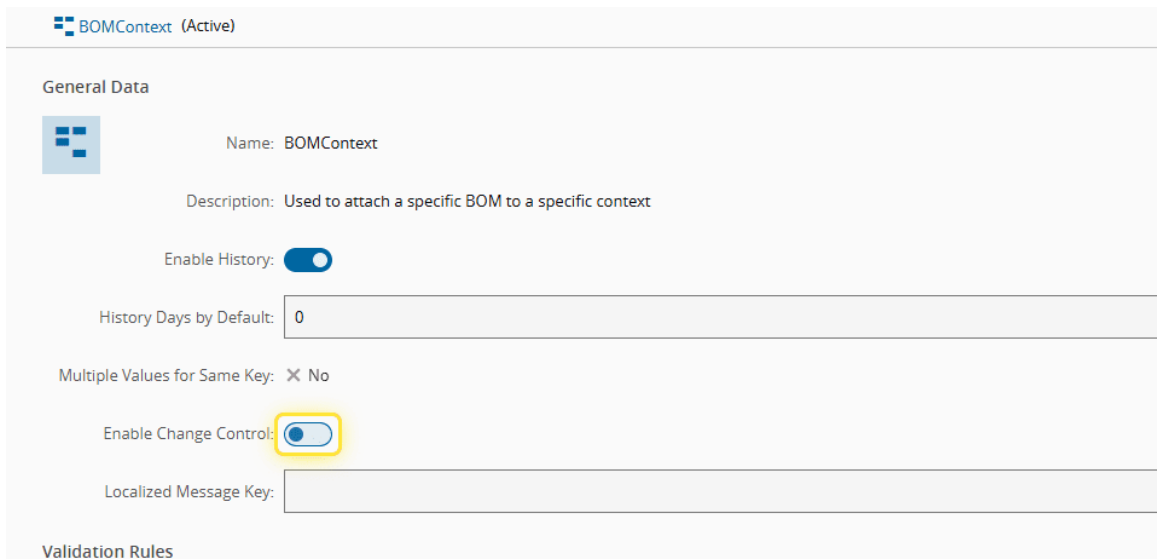

BOMContext (Active)

General Data

Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History: ☒

History Days by Default: 0

Multiple Values for Same Key: ☒ No

Enable Change Control: ☒

Localized Message Key:

Validation Rules

9. Select the Next button, and save.

critical manufacturing

Administration

Low Code

Business Data

Manufacturing

Maintenance

Quality

Planning and Logistics

Business Intelligence

Automation

Data Platform

Apps

product1 | Delta

BOM Context

Edit Smart Table

GENERAL DATA

PROPERTIES

PRECEDENCE KEYS

BOMContext (Active)

General Data

Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History: ☒

History Days by Default:

Multiple Values for Same Key: ☒ No

Enable Change Control: ☒

Localized Message Key:

Validation Rules

Pre-Validation Rule:

Post-Validation Rule:

Comments:

Cancel

Back

Next



Legal Information

Disclaimer

The information contained in this document represents the current view of Critical Manufacturing on the issues discussed as of the date of publication. Because Critical Manufacturing must respond to changing market conditions, it should not be interpreted to be a commitment on the part of Critical Manufacturing, and Critical Manufacturing cannot guarantee the accuracy of any information presented after the date of publication. This document is for informational purposes only.

Critical Manufacturing makes no warranties, express, implied or statutory, as to the information herein contained.

Confidentiality Notice

All materials and information included herein are being provided by Critical Manufacturing to its Customer solely for Customer internal use for its business purposes. Critical Manufacturing retains all rights, titles, interests in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Critical Manufacturing and the Customer must not disclose or transfer by any means any of these materials or information, whether total or partial, to any third party without the prior explicit consent by Critical Manufacturing.

Copyright Information

All title and copyrights in and to the Software (including but not limited to any source code, binaries, designs, specifications, models, documents, layouts, images, photographs, animations, video, audio, music, text incorporated into the Software), the accompanying printed materials, and any copies of the Software, and any trademarks or service marks of Critical Manufacturing are owned by Critical Manufacturing unless explicitly stated otherwise. All title and intellectual property rights in and to the content that may be accessed through use of the Software is the property of the respective content owner and is protected by applicable copyright or other intellectual property laws and treaties.

Trademark Information

Critical Manufacturing is a registered trademark of Critical Manufacturing.

All other trademarks are property of their respective owners.