



How to: Edit a Generic Table


1. Go to the Administration menu.

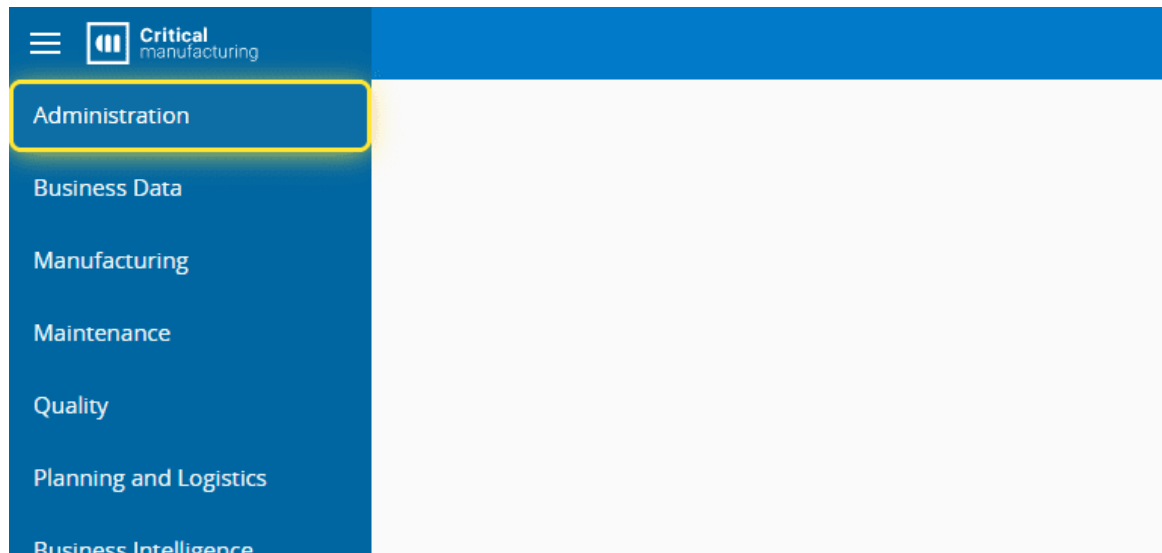

2. Select the Tables entity.

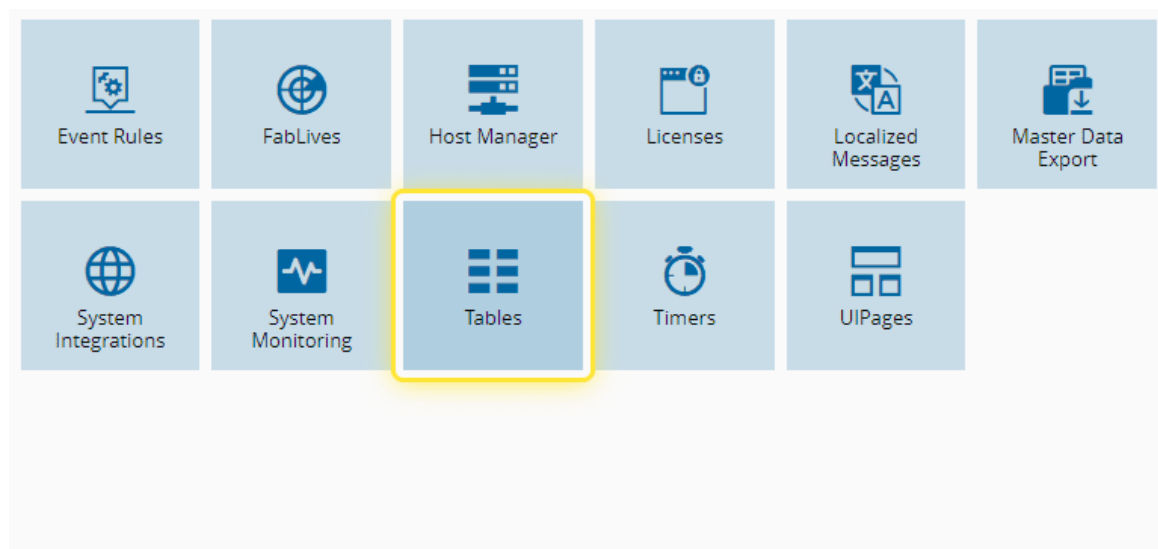


3. Select the Generic Tables sub-menu.

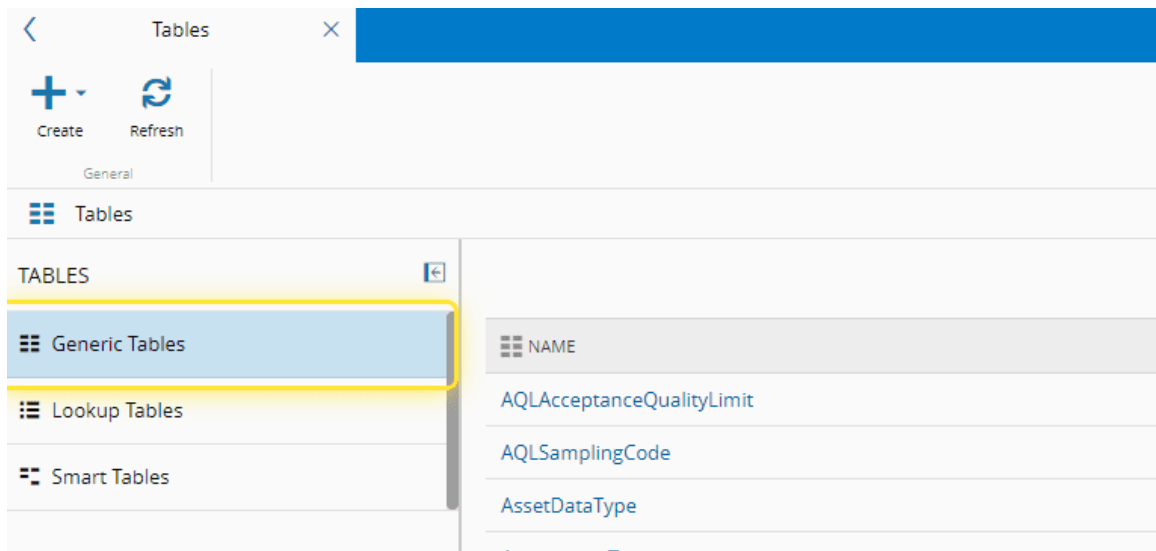


4. Select the desired table.

TABLES	NAME	DESCRIPTION	STATE
Generic Tables	AQLAcceptanceQualityLimit	This generic table is used to resolve the AQL Limits based on a certain ...	Active
Lookup Tables	AQLSamplingCode	This generic table is used to map a certain lot size to an inspection cod...	Active
Smart Tables	AssetDataType	Auxiliary table to support definition of complex DataTypes such like "g...	Active
	AttachmentType	AttachmentType Generic Table	Active
	CADFileInformation	Information for the CAD File	Active
	CalendarDayType	Definitions and colors for working days - both working and non-worki...	Active
	CentroidSideInformation	Defines information for Centroid Side.	Active
	ChangeSetUrgency	Table to map the urgency type with the priority rank	Active
	ChartRuleScope	Table to map ChartRule to a several conditions	Active
	ChecklistRuleScopeRelation	Table to map the allowed rules for checklist items based on the checkl...	Active
	ChecklistScopeContext	Table to map checklist scope based on a given context.	Active
	ContainerResourceRelation	This table holds the possible Container-Resource relations between Co...	Active
	ContainerTypeRelation	This table holds the possible ContainerType relations between Contain...	Active
	ContentType	Stores all supported document contenty types	Active
	ContextResolution	ContextResolutionGeneric Table	Active


5. Select the record to be edited.

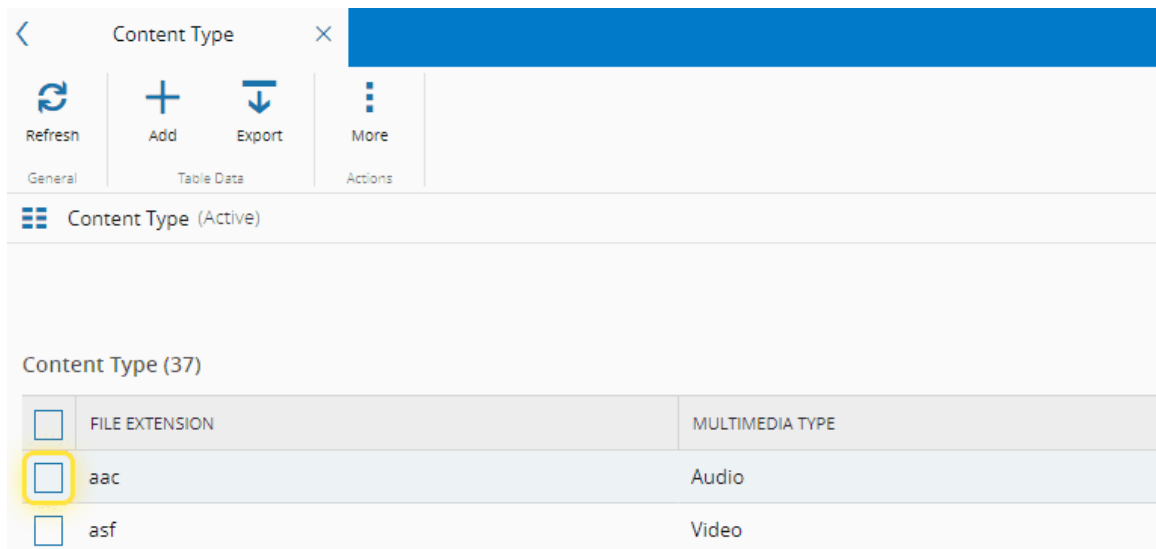

6. Upon selection you have other operations available besides Editing.

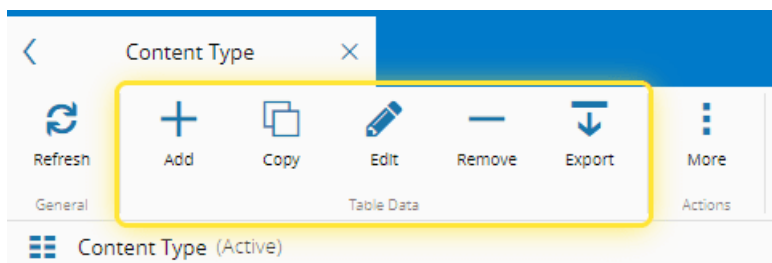


7. Select the Edit button.

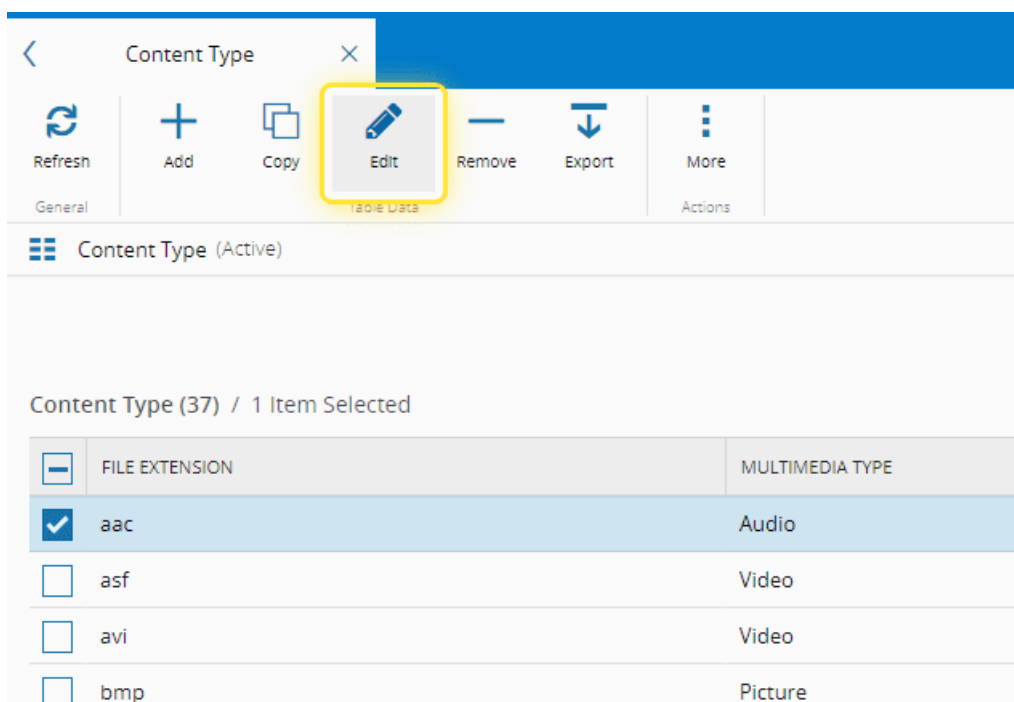

8. Under the Editing wizard, make the desired changes to the record.

For more information, see [Editing Generic Tables Data - Critical Manufacturing Documentation Portal](#) 

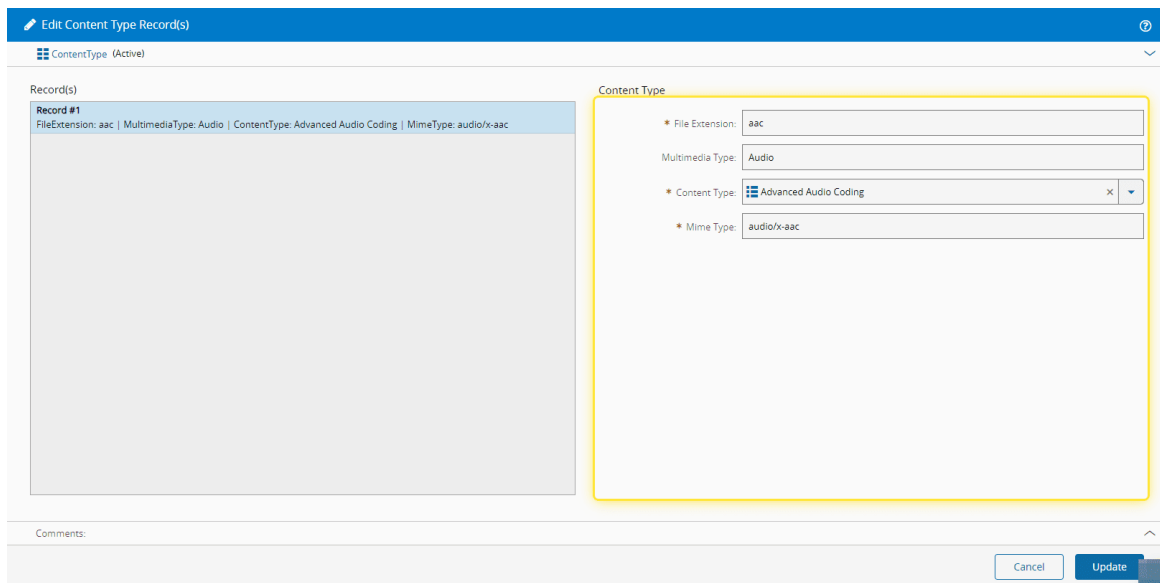

9. Select the Update button.

