


How to: Enable Smart Table's Change Control


1. Go to the Administration menu.



2. Select the Tables object.

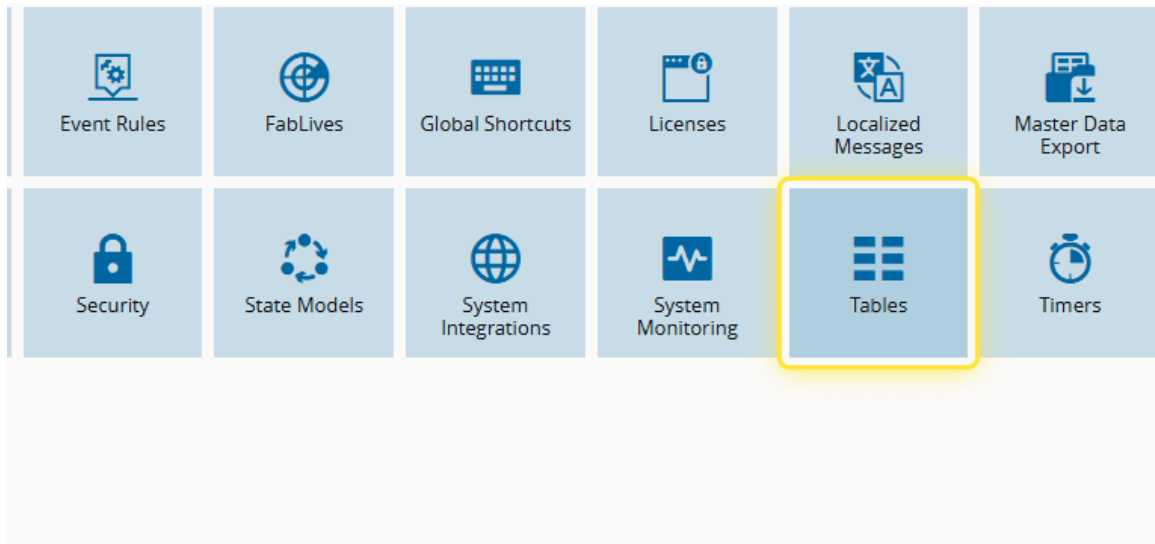


3. Go to the Smart Tables.

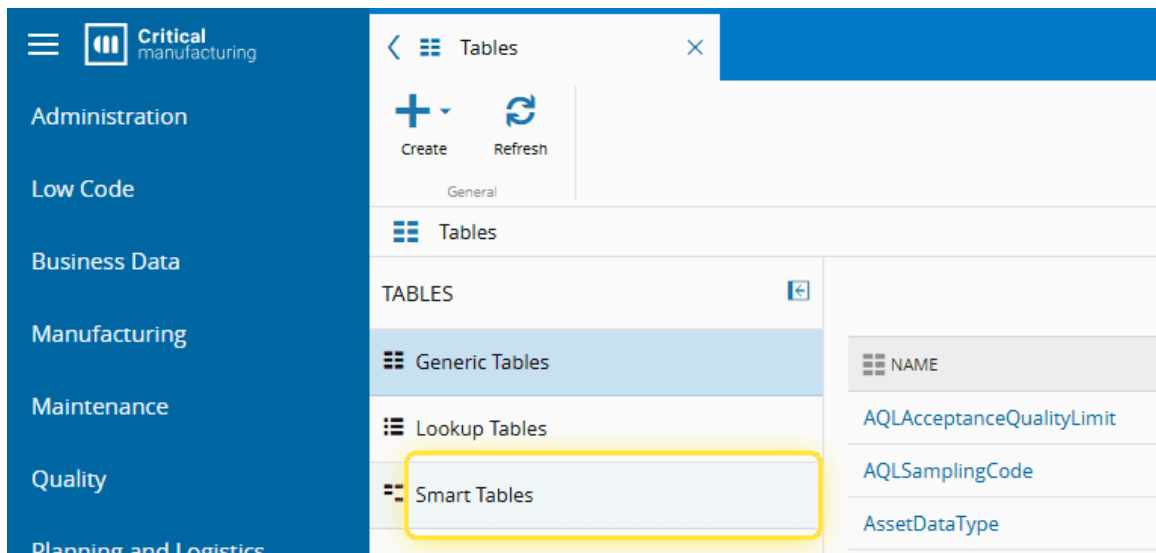


4. Select a Smart Table.

NAME	DESCRIPTION
ApplicationSettingsContext	Used to resolve application settings (e.g. Background
AreaPrintableDocumentContext	Used to obtain a list of PrintableDocuments for a c
BOMContext	Used to attach a specific BOM to a specific context
ChangeSetApprovalContext	Used to resolve a specific change set approval worl
FactoryAutomationControllerVersionOverrideContext	Used to resolve FactoryAutomation Controller vers
IntegrationHandlerResolution	Used to resolve the integration handler
KeyboardShortcut	Used to resolve keyboard shortcuts for performing
LayoutPersonalizationContext	Used to resolve layout personalization settings (e.g
MapDefinitionContext	Used to attach a specific Map Definition to a specifi


5. Select Views.

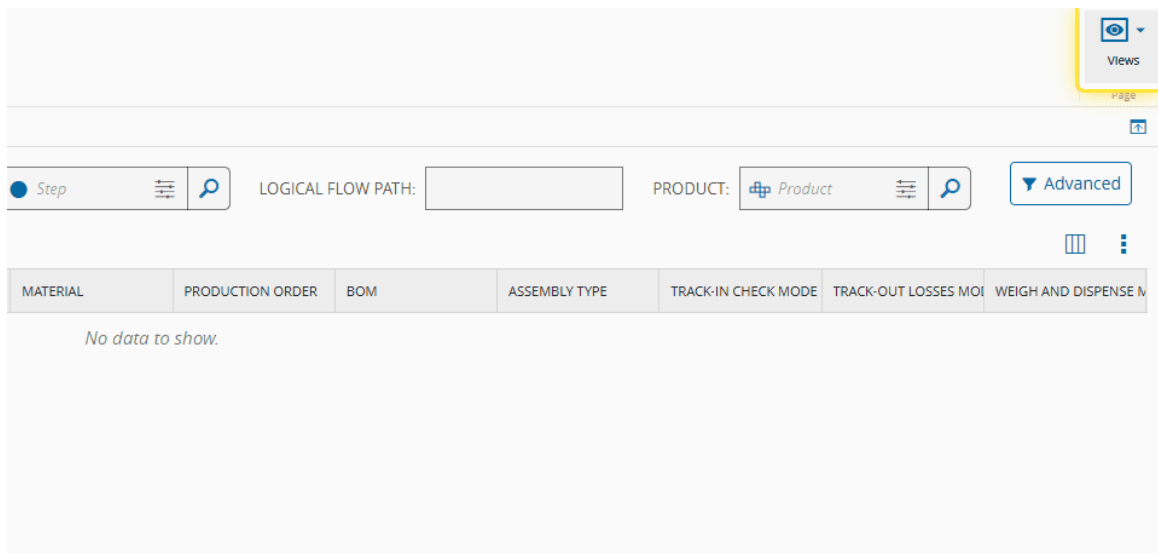

6. In Views, select Definition.

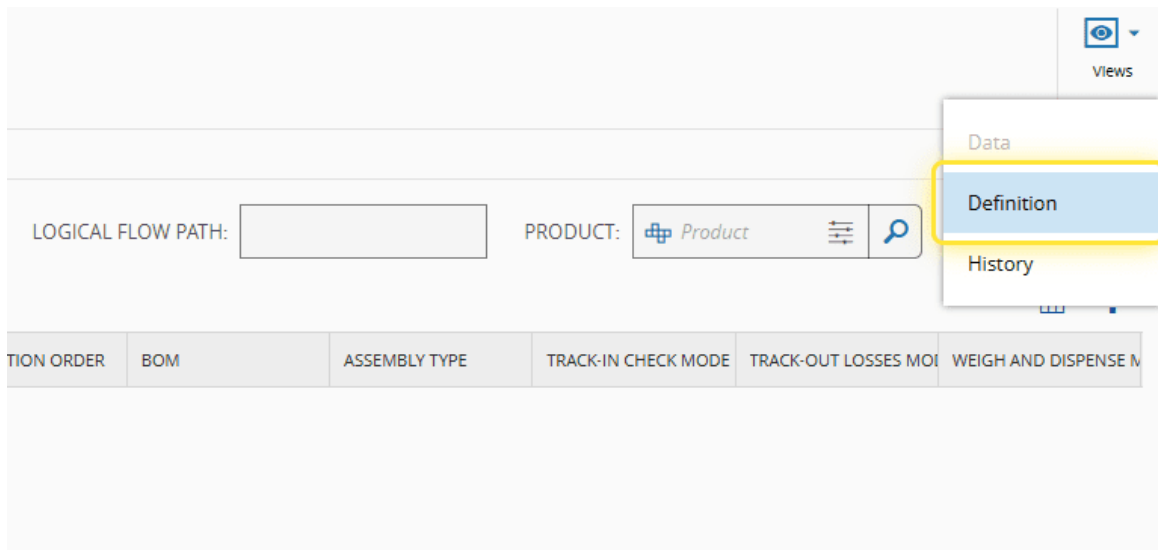

7. Select the Edit button.

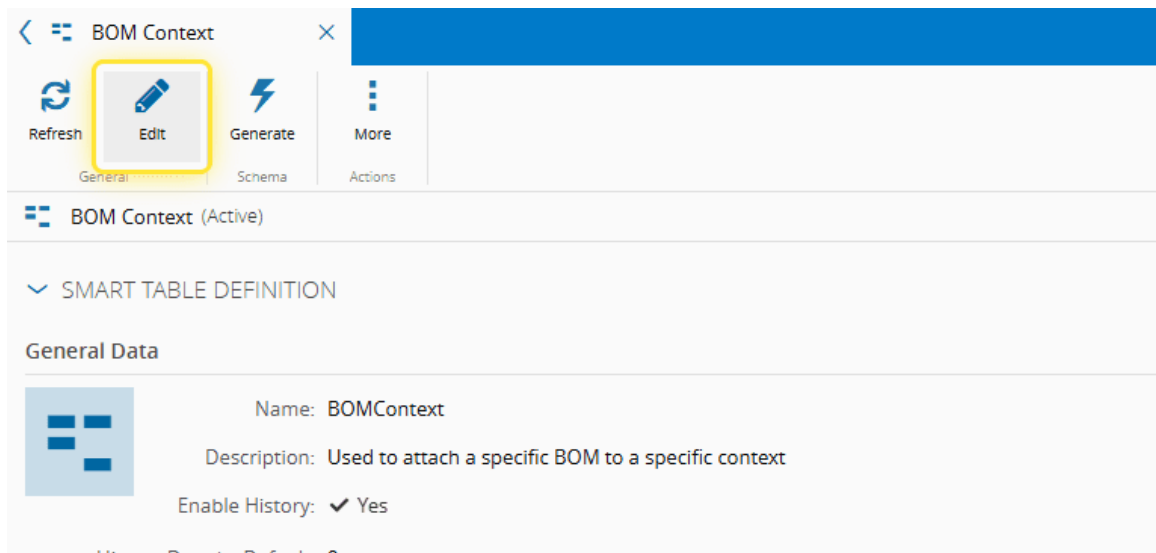

BOM Context

Refresh Edit Generate More

BOM Context (Active)

SMART TABLE DEFINITION

General Data


Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History: ☒ Yes

History Days by Default: 0

8. Set the Enable Change Control property to true.

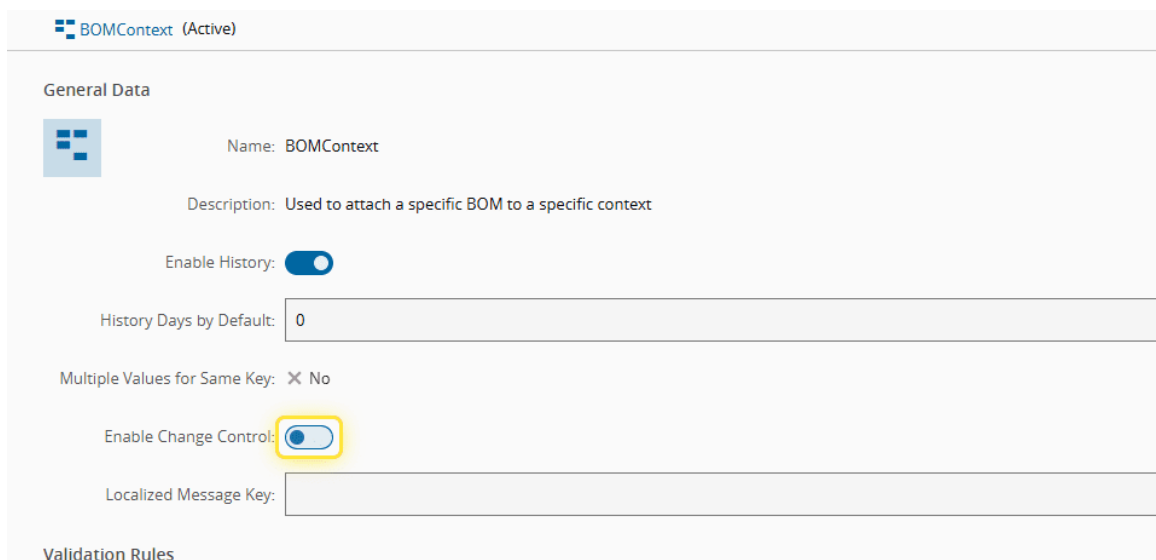

BOMContext (Active)

General Data

Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History: ☒

History Days by Default: 0

Multiple Values for Same Key: ☒ No

Enable Change Control: ☒

Localized Message Key:

Validation Rules

9. Select the Next button, and save.

Critical manufacturing

Administration

Low Code

Business Data

Manufacturing

Maintenance

Quality

Planning and Logistics

Business Intelligence

Automation

Data Platform

Apps

product/Daighe

BOM Context

✕

🔍

🔔

👤

✎ Edit Smart Table

🕒

GENERAL DATA

PROPERTIES

PRECEDENCE KEYS

BOMContext (Active)

▼

General Data

Name: BOMContext

Description: Used to attach a specific BOM to a specific context

Enable History

☒

History Days by Default:

0

Multiple Values for Same Key: X

No

Enable Change Control:

☒

Localized Message Key:

Validation Rules

Pre-Validation Rule:

BOMContext

 ✕ ⌵ ⌶

Post-Validation Rule:

Rule

 ⌵ ⌶

Comments:

Cancel

< Back

Next >