



How to: Disassemble an Assembled Material


1. Go to the Business Data menu.

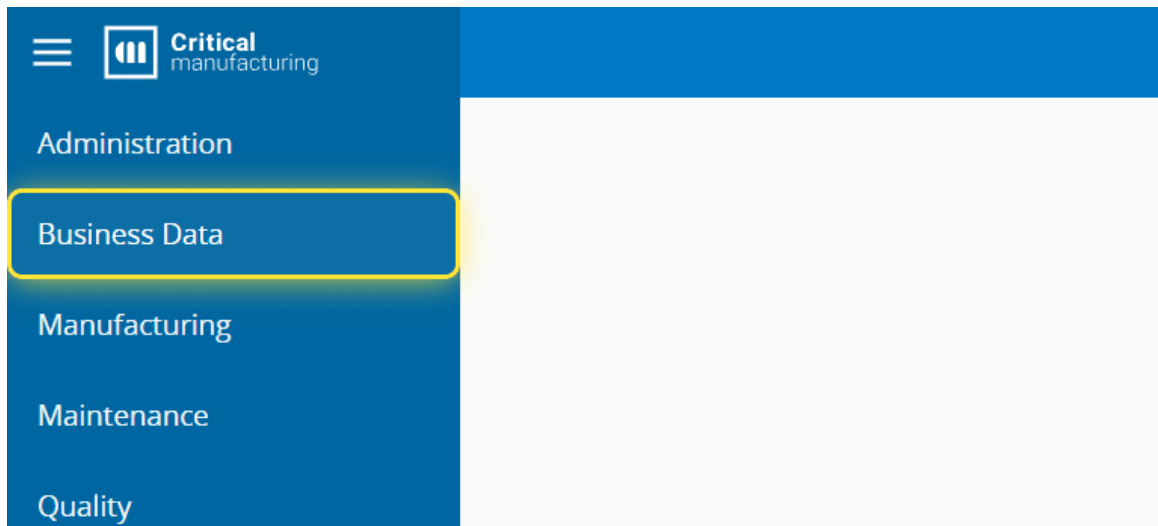

2. Select the Material entity.

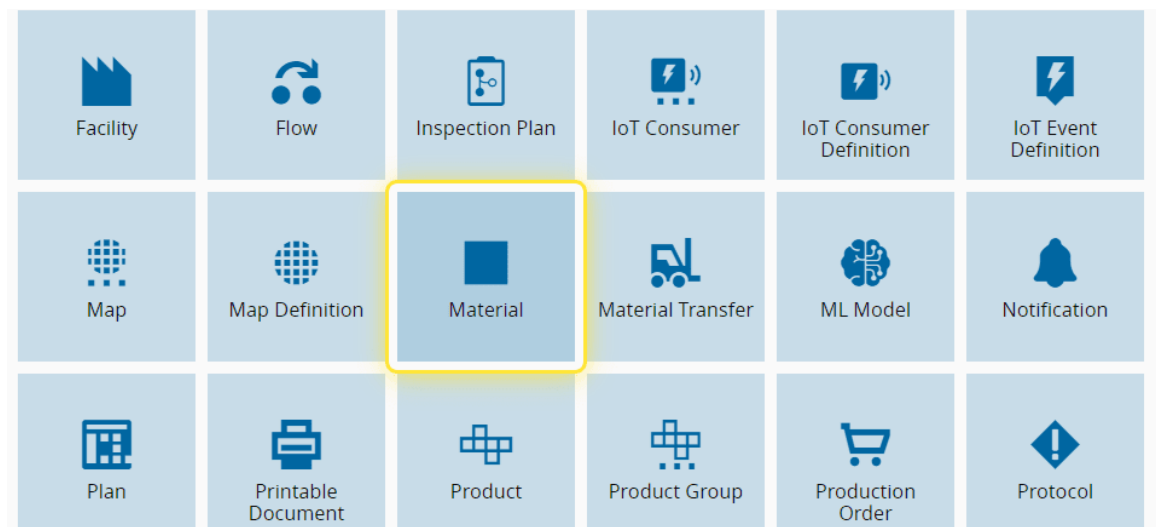

3. Select the desired Material.

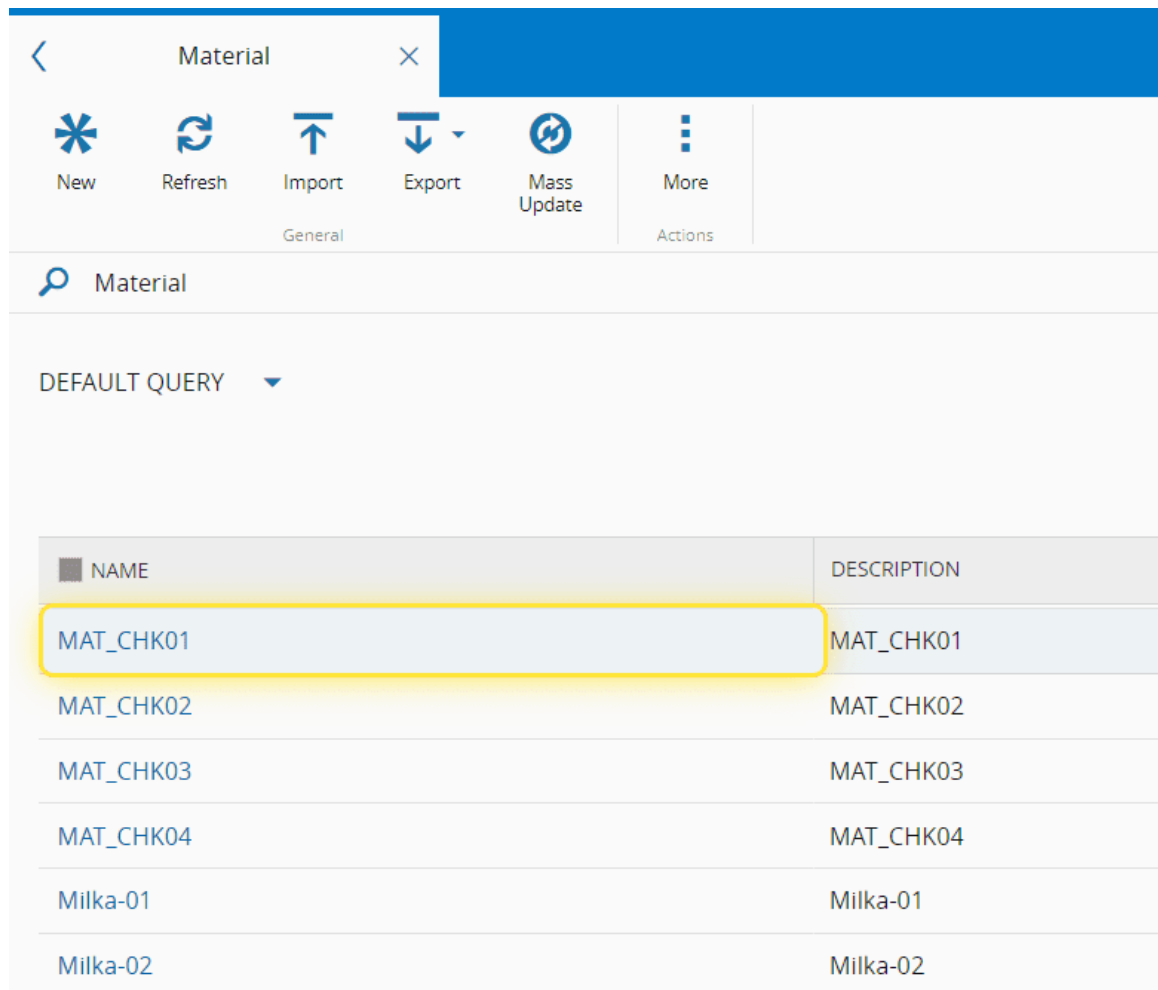

Material

General


Actions

Material

DEFAULT QUERY

| NAME | DESCRIPTION |
|-----------|-------------|
| MAT_CHK01 | MAT_CHK01 |
| MAT_CHK02 | MAT_CHK02 |
| MAT_CHK03 | MAT_CHK03 |
| MAT_CHK04 | MAT_CHK04 |
| Milka-01 | Milka-01 |
| Milka-02 | Milka-02 |

4. Select the Assemble button.

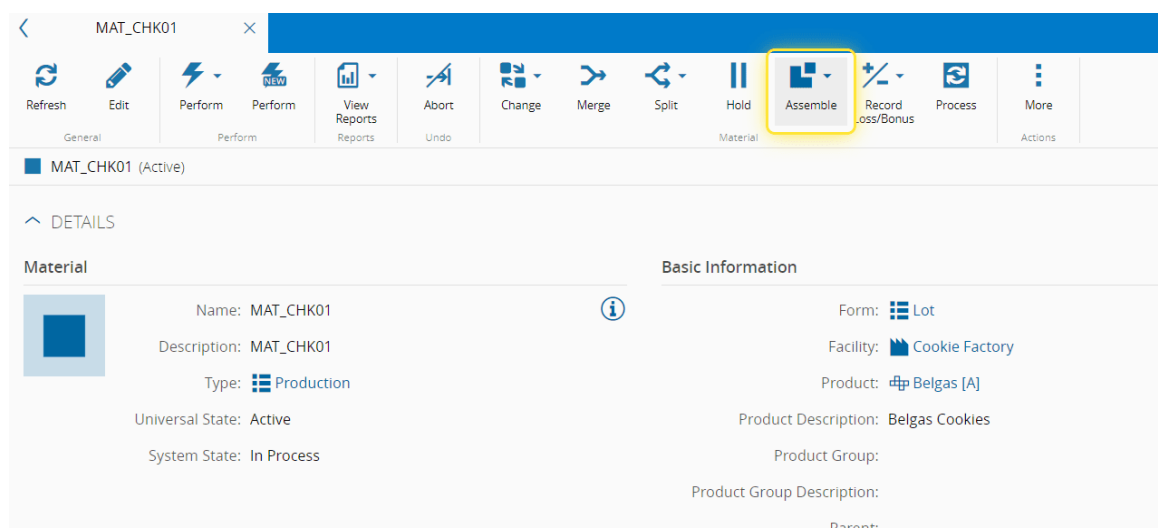

MAT_CHK01

General

Perform

Reports

Undo

Material

MAT_CHK01 (Active)

DETAILS

Material

Name: MAT_CHK01

Description: MAT_CHK01

Type: Production

Universal State: Active

System State: In Process

Basic Information

Form: Lot

Facility: Cookie Factory

Product: Belgas [A]


Product Description: Belgas Cookies

Product Group:

Product Group Description:


Parent:

5. Select the Disassemble option.

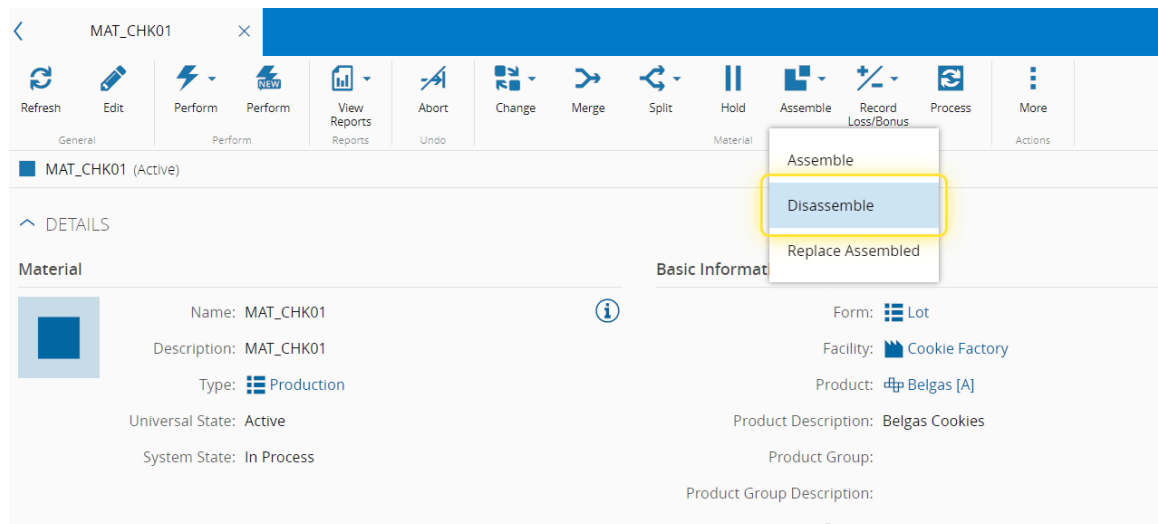


6. Under the Disassemble Material wizard you can manage the material to disassemble.

For more information, see [Disassemble Material - Critical Manufacturing Documentation Portal](#). 

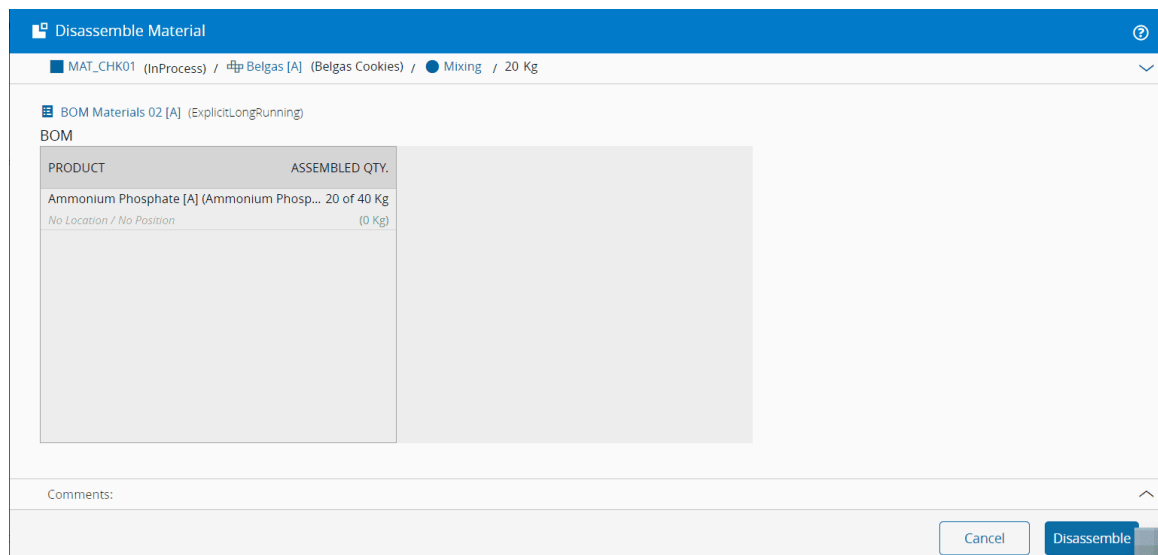

7. Indicate the quantity to disassemble and other options if applicable.

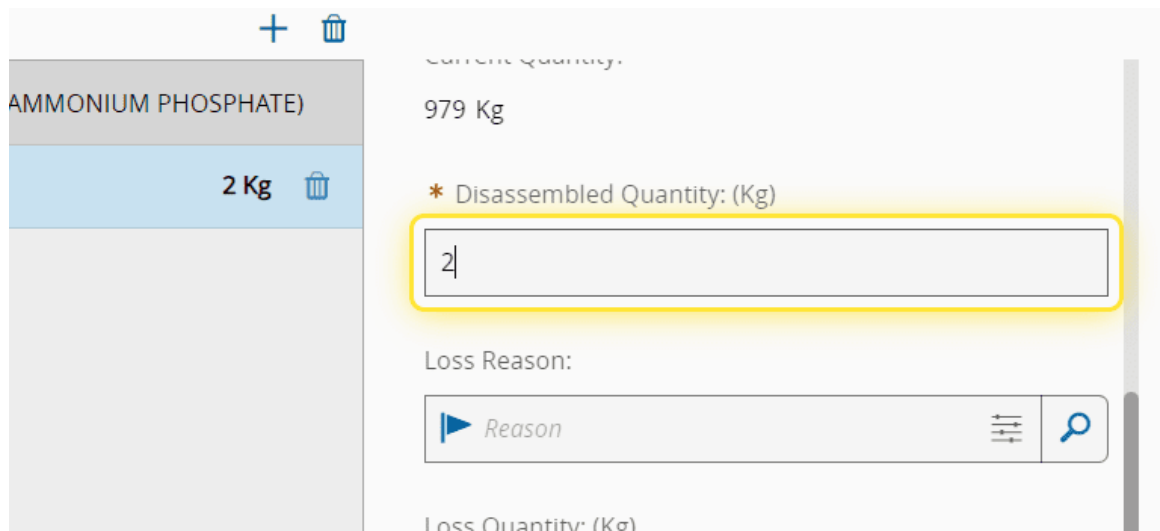

AMMONIUM PHOSPHATE)

2 Kg

Current Quantity:
979 Kg

* Disassembled Quantity: (Kg)


2

Loss Reason:

Reason

Loss Quantity: (Kg)

8. Select the Disassemble button.

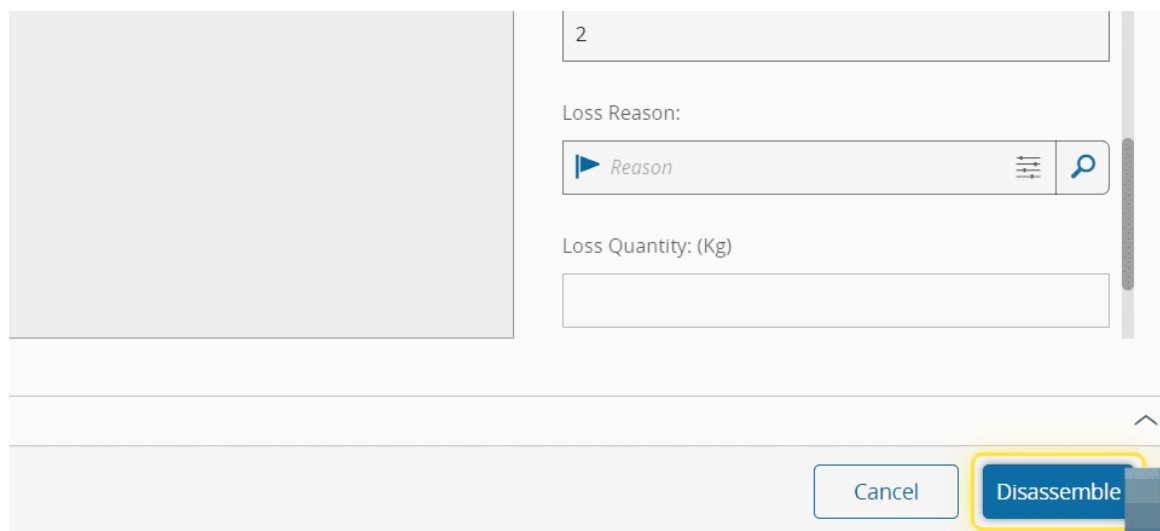

2

Loss Reason:

Reason

Loss Quantity: (Kg)

Cancel Disassemble