

How to: Remove Materials from Container

1. Go to the Business Data menu.



2. Select the Material entity.

You can also manage the Materials in a Container through the container object it self. This guide walks you trough the process considering a Material's point of view.



3. Select the desired Material.

Material

DEFAULT QUERY ▾

NAME	DESCRIPTION
AcetylsalicylicAcid-01	AcetylsalicylicAcid-01
AmmoniumPhosphate-01	AmmoniumPhosphate-01
Bolacha01	Bolacha01
Bolacha01.1	Bolacha01.1
Bolacha01.2	Bolacha01.2

4. Select the More button.









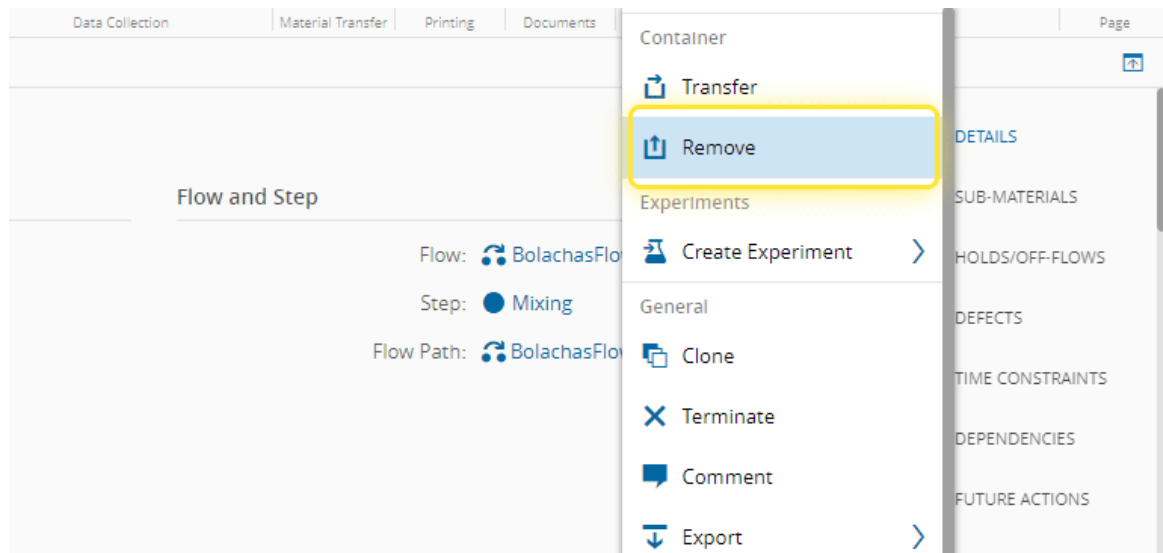

Data Collection Data Collection Material Transfer Printing Documents Actions Views Page

Flow and Step

Flow:  BolachasFlow01PF [A]
 Step:  Mixing
 Flow Path:  BolachasFlow01PF [A] > Mixing


DETAILS
 SUB-MATERIALS
 HOLDS/OFF-FLOWS
 DEFECTS
 TIME CONSTRAINTS
 DEPENDENCIES

5. Select the Remove option on the Container section.



6. Under the Remove Material from Container wizard validate the material to remove.

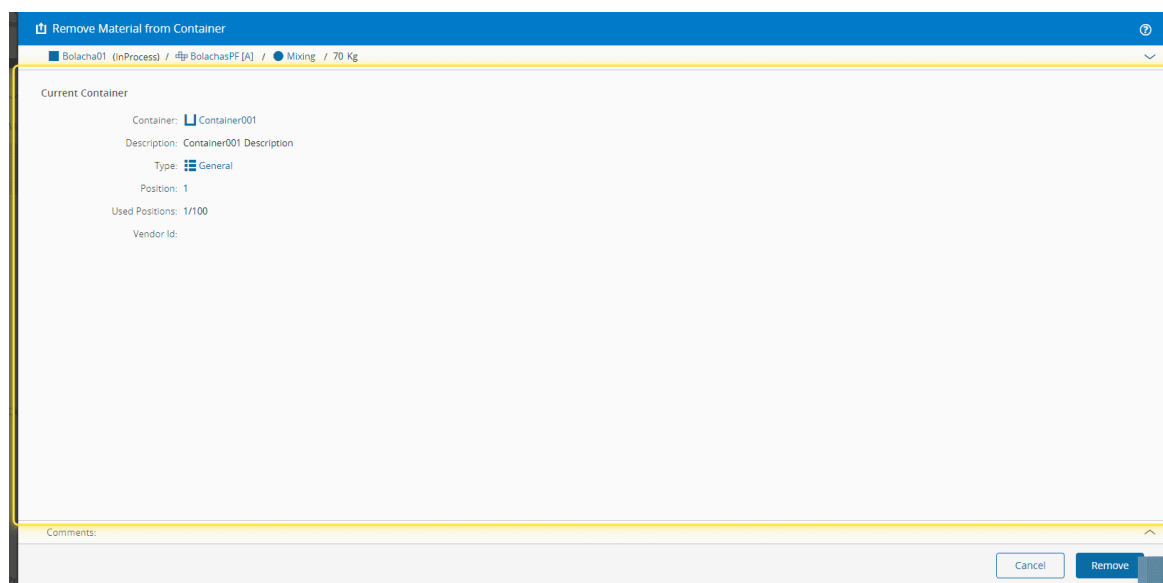For more information, see [Remove Material from Container - Critical Manufacturing Documentation Portal](#)



7. Select the Remove button.

