

Tutorial: Rework

11.3

October 2026

DOCUMENT ACCESS

Public

DISCLAIMER

The contents of this document are under copyright of Critical Manufacturing S.A. it is released on condition that it shall not be copied in whole, in part or otherwise reproduced (whether by photographic, or any other method) and the contents therefore shall not be divulged to any person other than that of the addressee (save to other authorized offices of his organization having need to know such contents, for the purpose for which disclosure is made) without prior written consent of submitting company.

[Home](#) [Tutorials](#) [All Guides](#) [Electronics](#)

Tutorial: Rework

Estimated time to read: 6 minutes

Objective


Learn how to set up a rework station, send a Material to rework, and return it to production with the **Return to Production** wizard.

Step 1: Enable the required security features

- Go to the system security configuration.
- Grant the `SMT.ReworkView` security feature, so the Rework View is available.
- Grant the `SMT.ReturnFromRework` security feature, so the **Return to Production** wizard can be run.

Step 2: Configure the rework station

- Navigate to **Resources**.
- Select or create the Resource that will act as the rework station. Its Processing Type must be **Process**.
- Set the attribute `SMTIsReworkStation` to `true`.

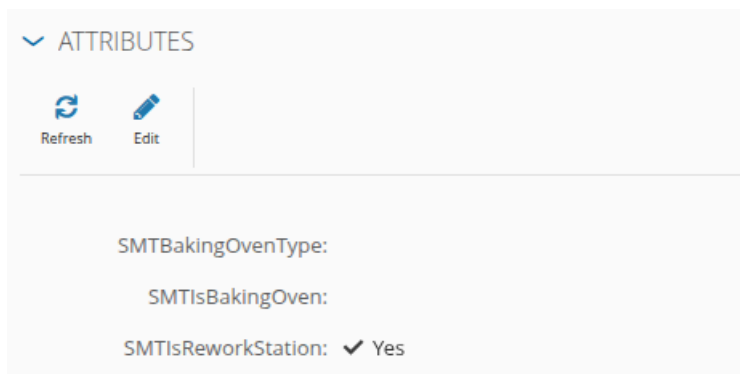

Step 3: Review the rework configuration entries

- Go to **Administration > Configuration** and open `/SMT/MaterialRework/`.
- `AllowReturnWithOpenDefects` (default `false`): leave it off to block the return of Materials that still have open defects, or turn it on to allow it.
- `AgingTimeWarning` and `AgingTimeLimit` (in minutes, optional): set them to highlight the **Aging** cell of Materials that stay too long at the rework Step.

Step 4: Send a Material to rework

A Material can be sent to rework in two ways:


- **Manually**, with the **Rework** action on the Material, choosing the rework path to follow.
- **Through Defect Actions**, with the **Send to Rework** Defect Action, configured on the Product and triggered when a defect is recorded or a Material is tracked out. See [Defect Actions](#) for how to configure and trigger it.

To prepare a Material for the return:

- Send the Material to rework manually, or record a defect (or track out the Material) so that **Send to Rework** is applied.
- Process the Material at the rework station until it reaches the **Processed** state. The Rework View's **Track-In** and **Track-Out** actions can be used for this.

Step 5: Open the Rework View

- Open the rework station Resource and go to **Views > Rework View**.

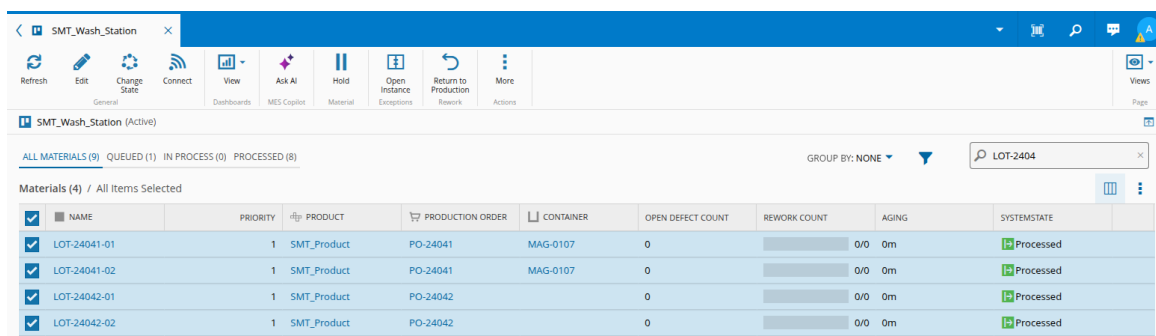

NAME	PRIORITY	PRODUCT	PRODUCTION ORDER	CONTAINER	OPEN DEFECT COUNT	REWORK COUNT	AGING	SYSTEM STATE
LOT-24041-01	1	SMT_Product	PO-24041	MAG-0107	0	0/0	0m	Processed
LOT-24041-02	1	SMT_Product	PO-24041	MAG-0107	0	0/0	0m	Processed
LOT-24042-01	1	SMT_Product	PO-24042		0	0/0	0m	Processed
LOT-24042-02	1	SMT_Product	PO-24042		0	0/0	0m	Processed

- Use the tab filters, the filter panel, the search box, or **Group By** to find the Materials to return.
- Select the Materials in the grid, or scan their barcodes. Scanning a Container selects all of its Materials.

Step 6: Launch Return to Production

- In the **Rework** group of the action bar, click **Return to Production**.

The button is only enabled when every selected Material is in rework, **Processed**, and was last processed at this Resource.

Step 7: Validation step

- Open **Options**. **Apply Validation Rule** is on by default with the rule **Same Product**.
- Choose the rule you need: **Same Product**, **Same Product Group**, or **Same Production Order**. To return Materials without a grouping rule, turn **Apply Validation Rule** off.
- If a Material does not match the rest of the selection, it is flagged with a warning icon and a tooltip explaining why. The wizard won't continue until it is removed.
- Remove the flagged Materials, or turn the rule off.
- Select a Material to review its details on the right, then click **Next**.

Return to Production

1 VALIDATION
2 DESTINATION

SMT_Wash_Station (Up) / SEMI E10 > Standby

OPTIONS

Apply Validation Rule ☒ Validation Rule: Same Production Order X

Materials to Return

LOT-24041-01	✓	🗑️
LOT-24041-02	✓	🗑️
LOT-24042-01	⚠️	🗑️
LOT-24042-02	⚠️	🗑️

Material Details

Material: LOT-24042-01
Priority: 1
Product: SMT_Product [A]
Product Description: SMT_Product
Production Order: PO-24042
Container:
Position:

Comments:

Cancel < Back Next >

Step 8: Destination step, Same Line

- Choose **Same Line**.
- The original Line and its FlowPath are shown read-only, together with the Information panel.

Return to Production

1 VALIDATION
2 DESTINATION

SMT_Wash_Station (Up) / SEMI E10 > Standby

Return Destination

☒ Same Line
Destination: ☐ Different Line
☐ Offline Station

Information

SMT Line: SMT_Line
Flow Path: SMT_LineFlow:A:1/SMT_SPI:2
Product: SMT_Product [A]
Product Description: SMT_Product
Flow: SMT_WashFlow [A]
Step: SMT_Wash
System State: Processed

Comments:


Cancel < Back Return

- Click **Return**.

If the Materials don't all return to the same Line, or a return Line can't be found for some of them, the wizard shows an error when you click **Return**. Go back to **Validation** and remove those Materials, or choose another destination.

Step 9 (Optional): Destination step, Different Line

- Choose **Different Line**.
- Select the **Target Line**. The Materials' original Line is not listed.
- If the Line has lanes, select the **Target Lane**.

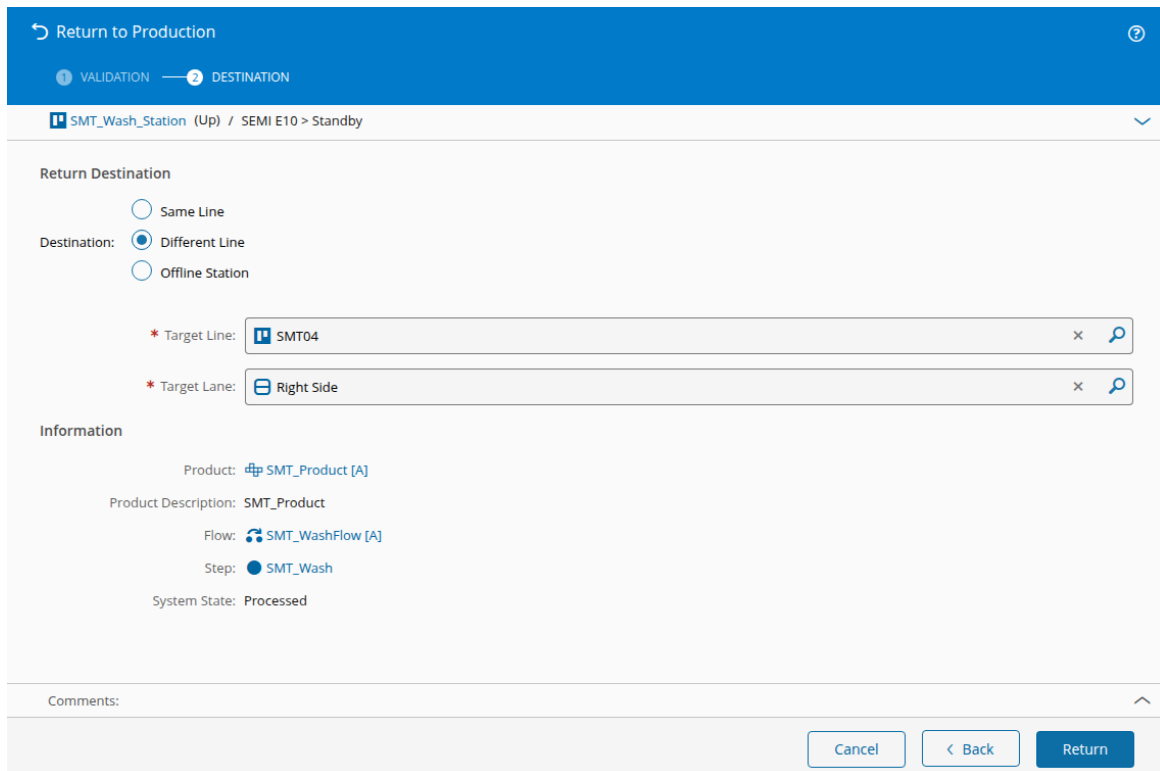

- Click **Return**.

Step 10 (Optional): Destination step, Offline Station

- Choose **Offline Station**.
- Select the **Offline Station** (the inspection Resource).
- Select the **Offline Flow** the Materials should follow at the station.
- If the station can perform more than one Step of that flow, select the **Offline Step**. Otherwise it is chosen automatically.
- Check the **Return Step**: the Step of the main flow the Materials go back to after the offline flow. It defaults to their original return Step.

Return to Production

1 VALIDATION — 2 DESTINATION

SMT_Wash_Station (Up) / SEMI E10 > Standby

Return Destination

☐ Same Line

Destination: ☐ Different Line

☒ Offline Station

* Offline Station: SMT_Labeling

* Offline Flow: SMT_AOI_Offline_Inspection [A]

* Return Step: SMT_Line

Comments:

Cancel < Back Return

- Click **Return**.

Step 11: Confirm the result

- On success, the wizard shows: *"N Material(s) set to return to production successfully. New destination: <Resource name>".*
- The Rework View refreshes and the returned Materials are no longer listed.

Expected Result

- The selected Materials are moved in bulk to the destination and FlowPath of the chosen return type.
- Same Line** and **Different Line**: the Materials are added to a matching parent Lot on the destination Line, which is created automatically if none is being produced.
- Offline Station**: the Materials follow the offline flow, then return to the selected **Return Step** of the main flow.
- If the wizard fails, no Materials are moved and the error is shown.
- MoveNext** isn't offered in the Rework View; **Return to Production** is the action that takes the Materials out of rework.

Frequent Configuration Questions

Why isn't the Rework View available on my Resource?

Check that:

- The Resource has Processing Type **Process**.
- The Resource has `SMTIsReworkStation` enabled.
- The current user has the `SMT.ReworkView` security feature.

Why is Return to Production disabled?

Check that:

- The current user has the `SMT.ReturnFromRework` security feature.
- Every selected Material is in rework, in the **Processed** state, and was last processed at this Resource.

Why can't I proceed past the Validation step?

Either the selection is empty, or at least one Material is still flagged by the validation rule. Remove the flagged Materials, or turn **Apply Validation Rule** off if grouping isn't required.

Why does Same Line show an error?

The selected Materials don't all return to the same Line, or a return Line can't be found for some of them. Remove those Materials in the Validation step, or choose **Different Line** or **Offline Station**.

Why does Different Line fail for my Line?

Check that:

- The target Resource is a Line.
- A lane is selected if the Line has lanes.
- The smart table **StepLineFlowContext** has an entry for the Line, the Materials' Product, and their return Step.

Why does Offline Station say the station is not valid?

The selected Resource can't perform any Step of the selected **Offline Flow**. Choose another flow or another station.

Why isn't MoveNext in the Rework View?

MoveNext is left out of the Rework View so that Materials are returned through the wizard, which resolves and validates the destination and FlowPath. Use **Return to Production**.



Legal Information

Disclaimer

The information contained in this document represents the current view of Critical Manufacturing on the issues discussed as of the date of publication. Because Critical Manufacturing must respond to changing market conditions, it should not be interpreted to be a commitment on the part of Critical Manufacturing, and Critical Manufacturing cannot guarantee the accuracy of any information presented after the date of publication. This document is for informational purposes only.

Critical Manufacturing makes no warranties, express, implied or statutory, as to the information herein contained.

Confidentiality Notice

All materials and information included herein are being provided by Critical Manufacturing to its Customer solely for Customer internal use for its business purposes. Critical Manufacturing retains all rights, titles, interests in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Critical Manufacturing and the Customer must not disclose or transfer by any means any of these materials or information, whether total or partial, to any third party without the prior explicit consent by Critical Manufacturing.

Copyright Information

All title and copyrights in and to the Software (including but not limited to any source code, binaries, designs, specifications, models, documents, layouts, images, photographs, animations, video, audio, music, text incorporated into the Software), the accompanying printed materials, and any copies of the Software, and any trademarks or service marks of Critical Manufacturing are owned by Critical Manufacturing unless explicitly stated otherwise. All title and intellectual property rights in and to the content that may be accessed through use of the Software is the property of the respective content owner and is protected by applicable copyright or other intellectual property laws and treaties.

Trademark Information

Critical Manufacturing is a registered trademark of Critical Manufacturing.

All other trademarks are property of their respective owners.