How to: Rework Material

1. Go to the Business Data menu.

2. Select the Material entity.

3. Select the Material you want to use.

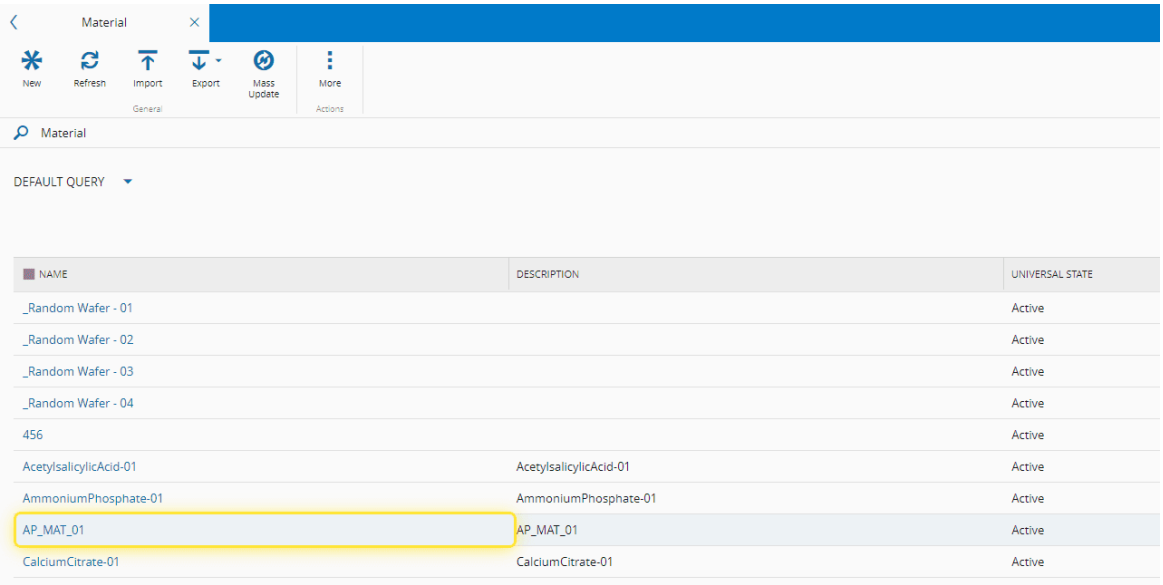

4. Select the Off-Flow button.

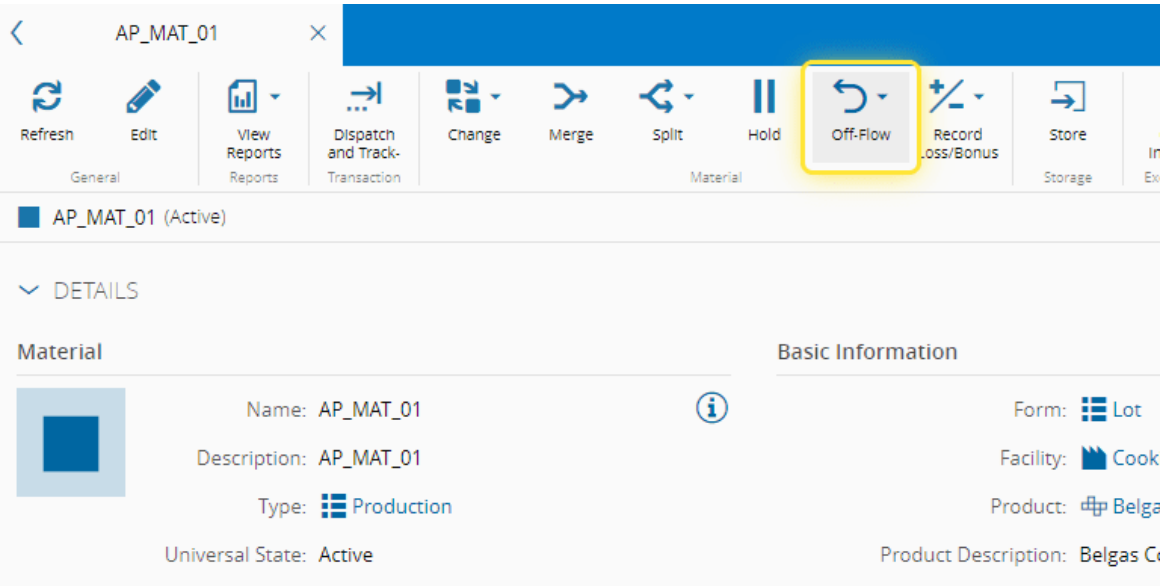

5. Select the Rework option.

For more information, see Rework Material - Critical Manufacturing Documentation Portal

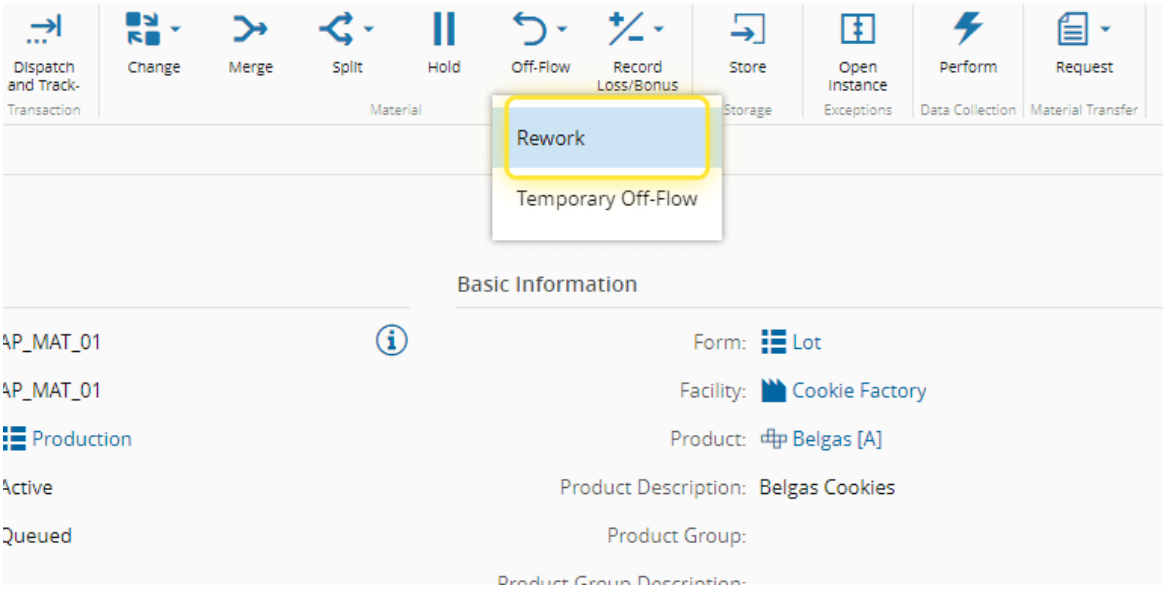
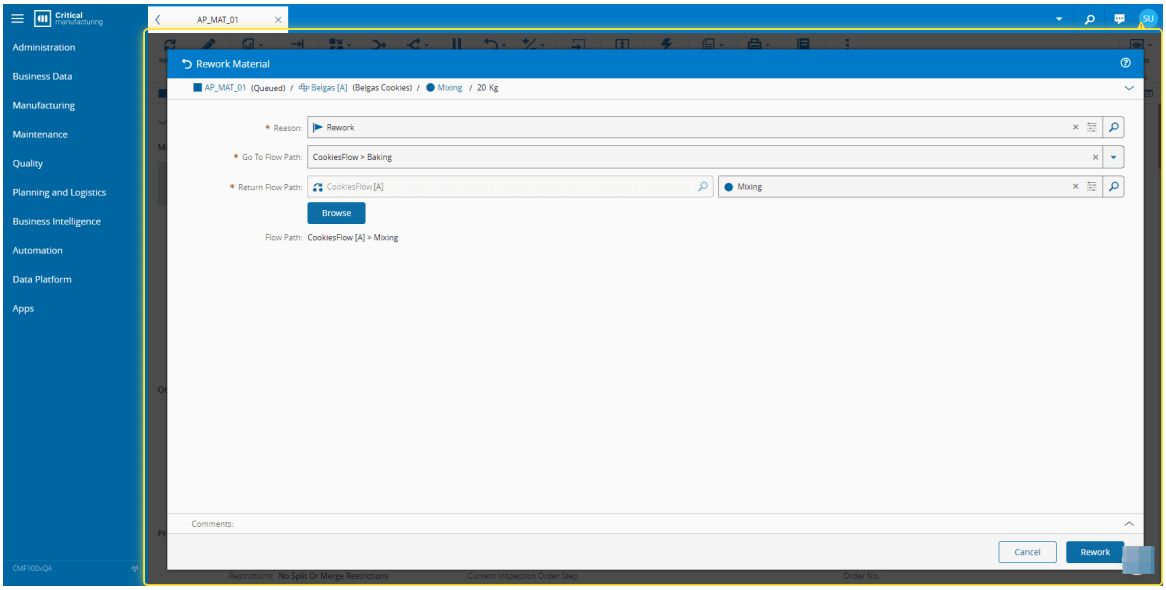
6. Complete the necessary fields and select the Rework button.