

## How to: Send Material to a Temporary Off-Flow


1. Go to the Business Data menu.



2. Select the Material entity.




3. Select the Material you want to use.

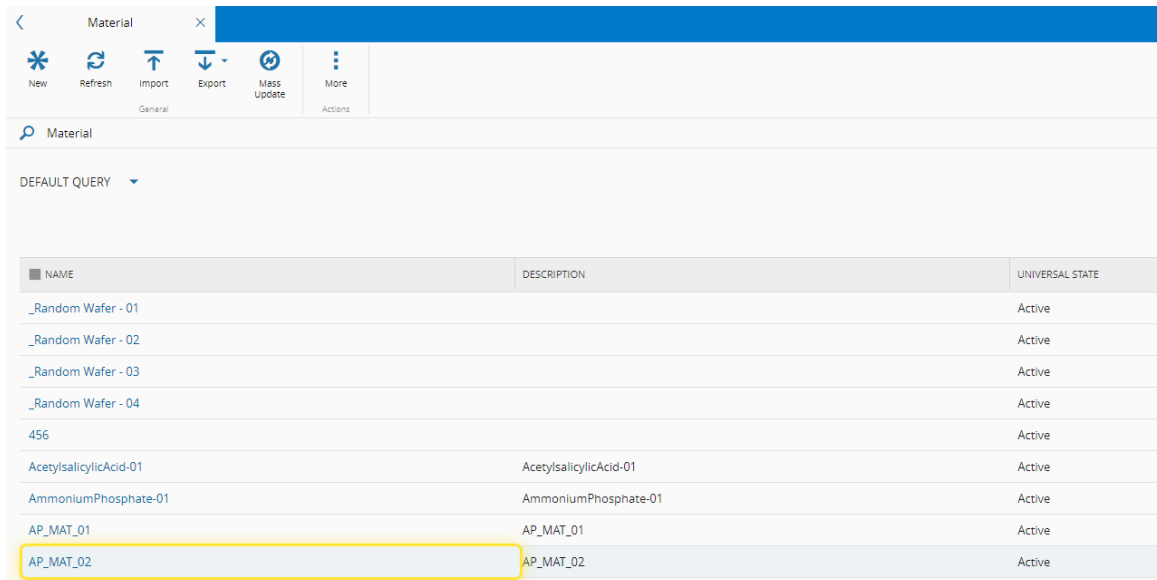

NAME	DESCRIPTION	UNIVERSAL STATE
_Random Wafer - 01		Active
_Random Wafer - 02		Active
_Random Wafer - 03		Active
_Random Wafer - 04		Active
456		Active
AcetylsalicylicAcid-01	AcetylsalicylicAcid-01	Active
AmmoniumPhosphate-01	AmmoniumPhosphate-01	Active
AP_MAT_01	AP_MAT_01	Active
AP_MAT_02	AP_MAT_02	Active

4. Select the Off-Flow button.

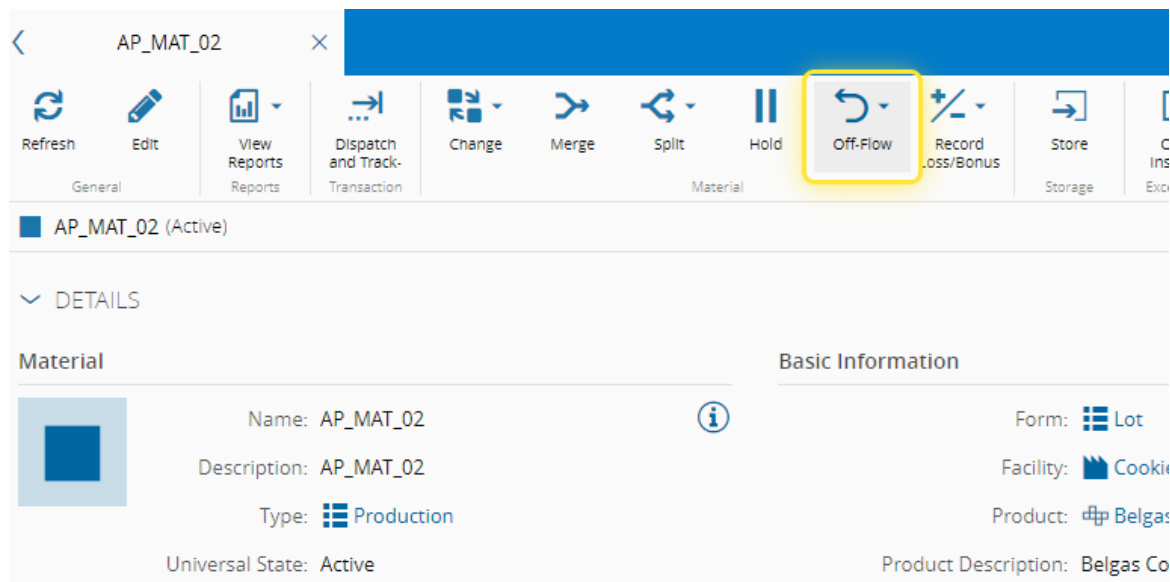


AP\_MAT\_02 (Active)

DETAILS

Material	Basic Information
<p>Name: AP_MAT_02</p> <p>Description: AP_MAT_02</p> <p>Type: Production</p> <p>Universal State: Active</p>	<p>Form: Lot</p> <p>Facility: Cookie</p> <p>Product: Belgas</p> <p>Product Description: Belgas Co</p>

5. Select the Temporary Off-Flow option.

For more information, see [Temporary Off-Flow - Critical Manufacturing Documentation Portal](#)

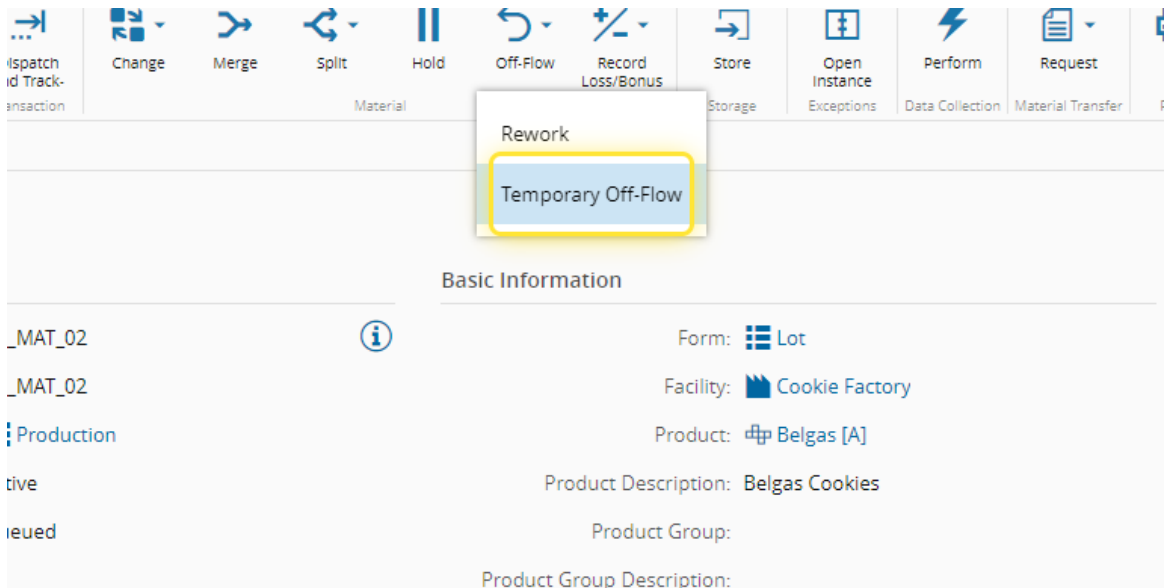

6. Complete the necessary fields and select the Send button.

